


ASSEMBLY MANUAL >

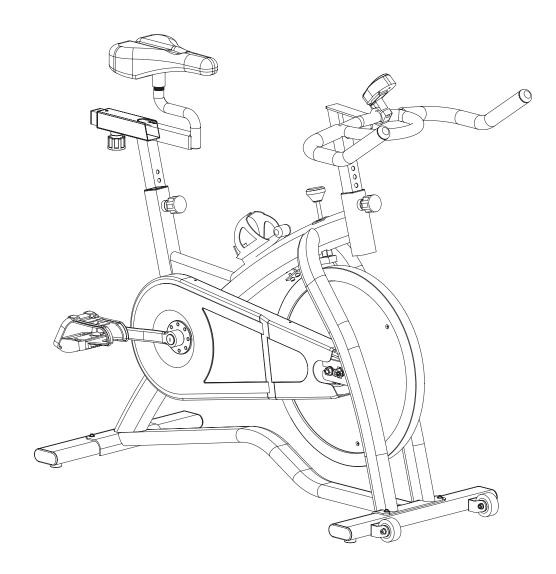

gauntlet

| _ | | | | |
|------|-------|--------|------|-----|
| PACO | ard (| carial | niim | nor |

Elite Gauntlet Spin bike

Thank you for purchasing the Elite Gauntlet Spin bike.

For over 20 years, Elite Fitness™ has been New Zealand's largest supplier of fitness equipment. Our aim and vision is to provide you Elite™ branded products, tested to the highest standard for quality and biomechanics at the best possible price.

Please read through this manual to familiarise yourself with the operation of your new **Elite Gauntlet Spin bike.** Doing so will help to insure that you get the most out of your machine, enjoying safe and effective workouts ahead.

Even though we go to great efforts to ensure the quality of each product we produce, occasional errors and or omissions do occur. In any event should you find this product to have either a defective or a missing part, please contact us for a replacement.

SERVICE & WARRANTY

For service and warranty assistance please visit:

www.elitefitness.co.nz/service

Online forms are available for Service, Warranty and Parts requests. (09) 258 9067

Elite Fitness HQ

11 George Bourke Drive Mt Wellington Auckland, New Zealand info@elitefitness.co.nz 0800 2 438 348 www.elitefitness.co.nz

CONTENTS

| Important Safety Instructions | 3 | Limited Warranty | 16 |
|-------------------------------|----|------------------|----|
| Product Specifications | 4 | Warm-Up Exercise | 17 |
| Assembly Instructions | 5 | Training Stages | 18 |
| Setting your Spin Bike Up | 12 | Parts | 19 |
| Care and Maintenance | 14 | Parts List | 20 |
| Maintenance Log | 15 | Exploded Drawing | 21 |

IMPORTANT SAFETY INSTRUCTIONS

The following definition applied to the word "WARNING" when used in this manual:



Used to call attention to POTENTIAL hazards that could result in personal injury or loss of life.

READ ALL INSTRUCTIONS BEFORE USING THE MACHINE

This product has been designed for home use only. Product liability and warranty conditions will not be applicable to products being subjected to professional use or products being used in a commercial environment. e.g Gym Centre

This exercise machine is built for optimum safety. However, certain precautions apply whenever you operate a piece of exercise equipment. Be sure read the entire manual before you assemble or operate your machine. In particular, note the following safety precautions.

- Read all instructions in this manual before using this equipment.
- Use the machine only for its intended use as described in this Manual.
- Inspect and tighten all the loose parts before this equipment is used.
- Keeps hands away from moving parts.
- Keep children and pets away from the machine at all time. DO NOT leave children unattended in the same room with the machine.
- Before using the machine to exercise, always do stretching exercises to properly warm up.
- Inspect the machine before each use; make sure all of the connections are tightly secured.
- Only one person at a time should use the machine.
- If the user experiences dizziness, nausea, chest pain, or any other abnormal symptoms, STOP the workout at once. CONSULT A PHYSICIAN IMMEDIATELY.
- Position the machine on a clear, levelled surface. DO NOT use the machine near water or outdoors.
- Always wear appropriate workout clothing when exercising. DO NOT wear robes or other clothing that could become caught in the machine. Sporting shoes are recommended when using the machine.
- Do not place any sharp object around the machine.
- Disabled persons should not use the machine without a qualified person or physician in attendance.
- Never operate the machine if the machine is not functioning properly.

- Only carry out training work on the equipment when it is in perfect working order. Only use original spare parts in the event of a repair.
- Do not use strong solvents for cleaning, and only use the tools supplied, or suitable ones of your own, for any repairs that may be required. Please dispose of the packaging and any parts that have to be replaced subsequently (all parts for the unit) at suitable collecting points or containers with a view to saving the environment.
- DO NOT extend the seat stem past the warning line "Max" when adjusting the seat height.
- Not for therapeutic use.

WARNING: Before beginning any exercise program, consult your physician. This is especially important for persons with pre-existing health problems. The seller assumes no responsibility for personal injury or property damage sustained by or through the use of this product.

SERVICE HINTS: The high quality standard of this product only will be kept if you on a regular basis check all screw-connections and moving parts on proper fitting. Damaged parts have to be changed immediately. During the time of repair the product must not be used by anybody.

IMPORTANT HINTS:


- A) This product has been tested in accordance with the requirements of EN 957-1/A1, EN 957-5, standard, Class HA (HOME USE). The maximum load is limited to 100KGS.
- B) Parents should be aware of the risk factor of young children playing on fitness equipment unattended. Make sure that the children are instructed properly in the use of the product and in the controlled execution of the different exercise. Misuse of the product could result in serious injury

PRODUCT SPECIFICATIONS

| User Weight Capacity: | 100KG |
|-----------------------|-----------------------|
| Dimensions: | 103.5 x 23.5 x 85.5CM |
| Shipping Weight: | 34KG |
| Net Weight: | 30KG |
| Power Requirements | Small Console X-3521 |

ASSEMBLY INSTRUCTIONS

STEP 1

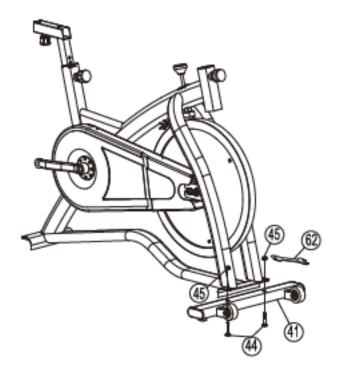


Attach the Front Stabiliser (41) to the frame using two Locked nuts (45) and two Carriage Bolts (44). Secure firmly using the Multi Wrench (62).

STEP 2



Attach the Rear Stabiliser (42) to the frame using two Locked nuts (45) and two Carriage Bolts (44). Secure firmly using the Multi Wrench (62).

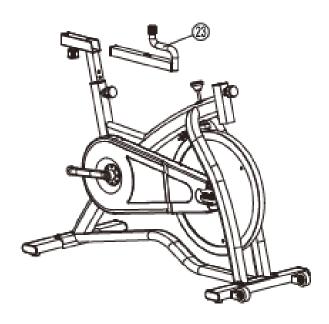


Install the Seat Slider (23) into the Seat Post (22) and secure with the Locking Pin (3).

STEP 4



Attach the Saddle (15) to the Seat Slider with two M8 Hex Nuts using Multi wrench (62). Make sure that the nose of the seat is pointing straight ahead before you tighten the Hex Nuts.

Note: The M8 Hex may be pre-attached to the seat clamp.

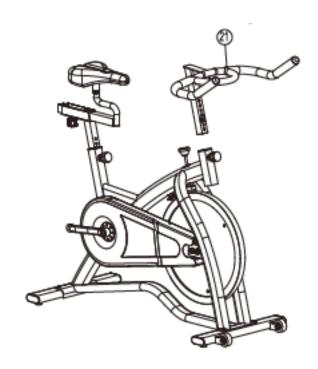

Install the Handlebar (21) into the frame receptor and secure with the Locking Pin.

STEP 6



Attach the Console bracket (59) into the Handlebar using one Self-Tapping Screw (60), and then secure firmly using the allen wrench.



Attach the Console (58) to the Console Bracket.

STEP 8




Place the computer sensor wire through the clamp on the left side of the frame.



Insert the reed switch into the sensor clamp on the frame. Then, rotate the flywheel so that the magnet is facing the reed switch. Move the reed switch so that it is 1-2 cm away from the magnet.


STEP 10

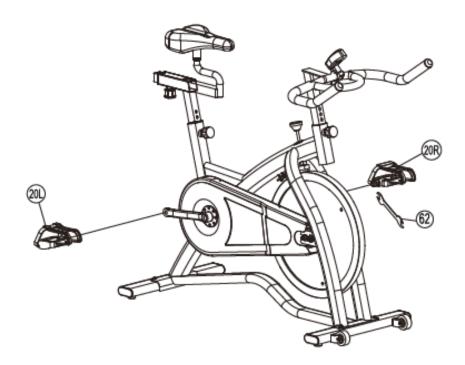


Thread the right pedal (20R) that has "R" on the spindle to the right side arm of the bike using the Multi-Wrench (62). Please note that the R pedal is right hand threaded which needs to be turned clockwise to tighten.

Thread the left pedal (20L) that has "L" on the spindle to the left side arm of the bike using the Multi-Wrench (62). Please note that the L pedal is left hand threaded which needs to be turned anti-clockwise to tighten.

9

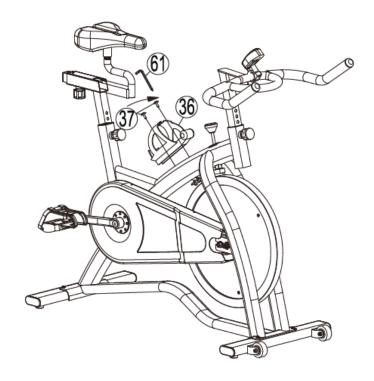

Take out water bottle cage (36) from the styrofoam and unscrew 2 self-tapping screws (37) from the frame with the allen wrench. Attach water bottle holder to the frame with 2 self-tapping screws (27) and with allen wrench.

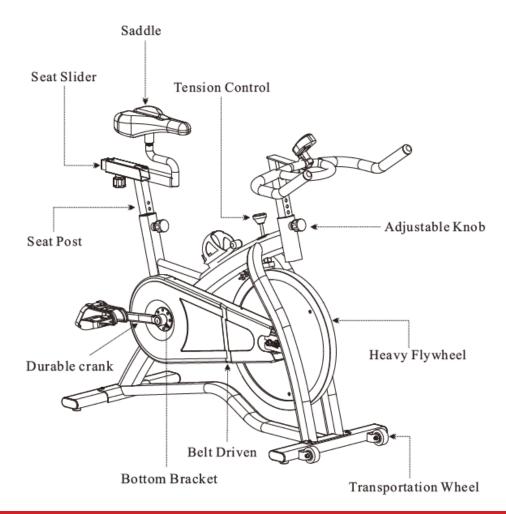

CONGRATULATIONS

Assembly of your **Elite Gauntlet Spin bike** is now complete! Be sure to fully inspect your machine before using it for the first time.

AWARNING

Failure to visually check and test and tech the assembly before use can cause damage to the **Elite Gauntlet Spin bike** and serious injury to users and bystanders and can also compromise the effectiveness of your exercise program.

SETTING YOUR SPIN BIKE UP



Saddle Height Adjustment

Having your bike seat adjusted to the right height is essential for a comfortable ride, efficient pedalling and avoiding injury. There are 2 adjustments located on the seat post. The first is a vertical height adjustment, the second is for horizontal seat position. Although there are many methods and opinions on the optimal saddle setting, the following is a quick an easy method to get started. Further adjustments can be made afterwards to optimise your position and comfort.

Saddle Height Adjustment

- Place your heels on the bike pedals and pedal backward. Your legs should be fully extended with your knees straight. If your hips rock from side to side while pedalling backward, the seat is too high.
- Place the ball of your foot on the pedal.
 There should now be a slight bend in your knee when the pedal is at its lowest point.
 This is a good starting point.



Adjusting the Seat Fore-and-Aft Position

Adjusting the Seat Fore-and-Aft Position

Once you've adjusted seat height, it's time to find the correct fore-and-aft position of the saddle. This determines where you sit in relationship to the crank set (where the pedals are attached), which helps decide how comfortable and efficient you'll be when riding. This also minimises stress to the knee by being in a more neutral position.

If you want to try to check the fore-and-aft setting at home, you will need a second person and a plumb line (a length of string with a nut or washer tied on the end will work fine).

Whilst sitting on the seat saddle bring your right crank arm around and have your helper stop the crank when the pedal is at three o'clock or parallel with the floor. Note that for this measurement to be accurate, your shoes must be correctly positioned on the pedals (the balls of your feet should be over the pedal axles).



Holding this position, have your helper place the end of the plumb line (line of string with nut/washer) on the front of your leg, at a point just below the bony protrusion that's beneath the kneecap.

The plumb line's weight should hang over your shoe. Check again to ensure that the crank-arm and pedal are level. By looking at the plumb line the knee should be in alignment with the centre spindle or axle of the pedal. Adjust the saddle to the correct position then tighten the locking pin.

Handle Bar Adjustment

The positioning of the handlebars can be dependent on the bike design and adjustability available.

To minimise back strain, adjust the height to a level that is comfortable for you. We recommend the handlebars be positioned at the same height level as the bike seat as a good starting point.

Please note: The spin bikes shown in the 'setting up your spin bike' section are for demonstration purposes only and your spin bike my vary in aesthetics and features.

AWARNING

Before cleaning or carrying out any maintenance on your spin bike, ensure the power is turned off and the power cord removed from the plug socket.

Prolong the life of your spin bike by performing periodic maintenance checks. Not only does this ensure your machine is in full working order to ensure they continue to run smoothly and reliably, but it will save you service costs in the long run.

- General cleaning of the unit after use will protect the bikes powder-coated framework and prevent unnecessary corrosion stains and damage to the structural components from sweat and perspiration.
- Check all nuts and bolts securing the framework, seat and handlebar assemblies are tight.
- Ensure the pedals are securely attached to the crank arms. When tightening pay attention to the reverse thread (tightening Anti-clockwise) on the left hand pedal assembly, when sitting on the bike. Be careful not to strip or force the pedal thread when tightening.

Friction Brake Pad System

Where a felt-type brake pad system is used, periodically lubricate the pad with a silicone based spray to prolong it's service life. Do NOT use WD40 or similar lubricants. Ensure the contact surface on the flywheel is kept clean and free of debris and sweat.

If a leather material brake pad is used, no lubrication is required.

NOTE: DO NOT ATTEMPT TO OVERTIGHTEN THE TENSION DIAL ADJUSTMENT, OVER TIGHTENING MAY CAUSE DAMAGE TO THE SHAFT THREAD.

Magnetic Braking System

If you have a magnetic spin cycle, there is normally no adjustment necessary as they use a low maintenance non-friction resistance system. Periodically check the movement of the magnetic brake via the cable level or tension dial to ensure it does not come into contact with the rotating flywheel at any time. The flywheel surface should be kept clean and free of dust debris and sweat.

Chain Driven

The chain will require periodic lubrication of the chain to maintain a smooth and quiet motion. The chain guard may need to be removed to perform this procedure. You may wish to put a drop sheet or similar under your bike to protect your floor coverings.

Before lubricating the chain, use an old rag to remove any old oil or residue from the chain. Lightly apply a chain or multipurpose oil to the chain. Secure the chain guard before using your bike.

Belt Driven

Belts do not require lubrication, however through normal wear and tear they may stretch and require forward adjustment of the flywheel to increase the belt tension if any slippage occurs. The adjustable tension bolts are normally found attached to the flywheel axle. DO NOT over-tighten, only enough to stop any slipping of the belt drive system.

If you require further assistance or advice contact the Elite Fitness Service Department or your nearest Elite Fitness Store.

MAINTENANCE LOG

Prolong the life of your spin bike by performing periodic maintenance checks. Not only does this ensure your machine is in full working order, but it will save you service costs in the long run.

Every time you perform maintenance, record the date and if you can, the distance and hours operated.

| | DATE | HOURS | DISTANCE - | | ANICAL ENANCE | FRA | ME | SERVICE |
|-----|-------|-------|------------|-------|------------------|---------|------------------|----------|
| | DATE | HOURS | DISTANCE | Brake | Chain / Belt | Cleaned | Seat / Pedals | COMMENTS |
| eg: | 01/06 | 15 | 16.5km | J | J | J | J | none |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | - | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | - | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | - | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | - | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | - | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | - | | | | | | |
| | | | - | | | | | |
| | | | | | | | | |
| | | | - | | - | | | |
| | | - | | | | | | |
| | | _ | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | _ | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |

LIMITED WARRANTY

Warranty Range

Damage in correct maintenance and normal operations (not factitious factors). Warranty card to the original purchaser, shall not be transferred.

Warranty Time

HOME USE

- 10 Year Frame
- 1 Year Parts and Labour

The following conditions are not under warranty range:

- A) As a result of abuse, neglect, accident, or unauthorized modification;
- B) The damage due to incorrect assembly or adjustment of the machine;

Repair and Maintenance Service

Please contact our Elite Fitness Service Department at <u>eliteservice@elitefitness.co.nz</u> or visit www.elitefitness.co.nz for any service related issues or advice on preventative maintenance servicing procedures.


WARM-UP EXERCISE

Warm up exercise is important in preparing the muscles for activity whilst minimising the risk of injury. You may choose to warm up with a light/brisk walking pace for 5-10 minutes before stopping and performing some simple stretches. (As shown in the pictures below)

 Hamstring Stretch (Standing) Keep your knees slightly bent and slowly lean forward, back and shoulders relaxed, reaching towards your toes. You should feel the tension and slight discomfort in your hamstring muscles. Hold for 15-20 seconds.

Repeat 2-3 times.

- Hamstrings Stretches (Seated) Sitting on the floor preferably on a mat, put one leg straight, the other inward and close to the inside of the straight leg. Lean forward from the hips, reaching towards your toes. Hold for 10-15 seconds, and relax. Repeat 3 times for each leg (See picture 2).
- Crus and Feet Tendon Stretches Standing with two hands on the wall or tree, one leg behind. Keeping your legs straight and the heel on the ground, lean forward towards the wall or tree. Hold for 10-15 seconds, and relax. Repeat 3 times for each leg (See picture 3).
- Quadriceps Stretches Keeping your balance with your left hand holding onto a wall or stationery fixture, grasp your right foot with your right hand and stretch your right heel toward your buttocks slowly, until you feel the stretch in the front of your thigh. Hold for 10-15 seconds, and relax. Repeat 3 times for each leg (See picture 4).
- Sartorius (Inner Muscles of the Thigh) Muscle
- Stretches Sitting down with the soles of your feet or shoes together and your knees positioned outward. Pull your feet towards your groin until you can feel the stretch. Hold for 10-15 seconds, and relax. Repeat 3 times (See picture 5).

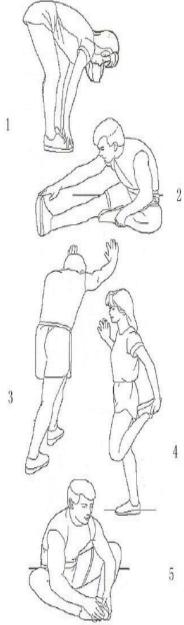

| | | | | | E | | e Zon | е | | | |
|------------------|------|-----------------------------------|-------------------------------|---------|----------|---------|----------|--------|--------|-----|-----|
| | | 20 | 25 | 30 | 35 | 40 | GE 45 | 50 | 55 | 60 | 70 |
| | 100% | 200 | 195 | 190 | 185 | 180 | 175 | 170 | 165 | 155 | 150 |
| | | | V02 | Max (| Maxim | um Eff | ort) | | | | |
| | 90% | 180 | 176 | 171 | 167 | 162 | 158 | 153 | 149 | 140 | 135 |
| | | | Anaerobic (Hardcore Training) | | | | | | | | |
| te | 80% | 160 | 156 | 152 | 148 | 144 | 140 | 136 | 132 | 124 | 120 |
| r Minu | 70% | 140 | Aero | obic (C | ardio T | raining | g/Endu | rance) | 116 | 109 | 105 |
| Beats Per Minute | 60% | Weight Control (Fitness/Fat Burn) | | | | | | | | | |
| | 50% | 100 | | | Activity | | | ce/Wa | rm up) | 78 | 75 |

Cardiovascular training plays an important part in maintaining a healthy heart and lung function, so it's no surprise we should be paying attention to how quickly our heart beats during exercise. The chart above outlines a range of heart rate training zones determined by the individual's age and workout goals to ensure you train safely and effectively.

Heart Rate can be measured by using the radial (wrist) or carotid (neck) pulse using your index and middle fingers, counting the beats for 10 seconds and multiplying by 6. Alternatively, the use of a Wireless Telemetry Heart Rate strap and watch will give you an accurate Beats Per Minute (BPM) reading.

220 – AGE = TMHR (Theoretical Maximum Heart Rate)

TMHR x 85% = (Upper Training Limit) bpm (Beats per Minute)

TMHR x 65% = (Lower Training Limit) bpm

Note: Contact heart rate may provide innaccurate readings and is designed only as a guide

Example: 220 - 39 = 181 bpm

181 x 85% (0.85) = 154 bpm (Upper Training Limit)

181 x 65% (0.65) = 118 bpm (Lower Training Limit)

PARTS

We recommend 2 people assist in assembling this unit. Place all parts of the spin bike in a cleared area and remove the packing materials. Do not dispose of the packing materials until assembly is completed. Before you start installation, inspect and prepare all parts and screws featured in this manual. When you open the carton, you will find the following parts:

Console Guide

FUNCTIONAL BUTTON:

Mode/ Reset - Push down to select functions

- Push down for 3 seconds to reset time, distance and calories


FUNCTIONS AND OPERATIONS:

- **1. Scan** Press MODE button until "▼" appears at SCAN position, monitor will rotate through the following functions: time, speed, astance and calories. Each display will appear for 4 seconds.
- **2. Time -** Count the total time from exercise start to end.
- **3. Speed** Display current speed.
- **4. Distance -** Calculating the distance from start to end of exercise.
- **5. Calories-** Total calories burned from start to end of exercise.
- **6. Auto ON/OFF & Auto START/ START-** When not in use, the power will turn off automatically turn off after 8 minutes. When the wheel is in motion or when pressing the console, the montior will turn on.

| FUNCTION | AUTO SCAN | Every 4 seconds | | |
|-------------|------------------|--|--|--|
| | TIME | 00:00'~99:59' | | |
| | CURRENT SPEED | The maximum signal can be pickup is 99.9KM/H | | |
| | TRIP DISTANCE | 0.00~99 .99KM | | |
| | CALORIES | 0.1~999.9KCAL | | |
| BATTERY TY | YPE | 2pcs of SIZE −AA or UM −3 | | |
| OPERATING | | 0°C ~ +40°C | | |
| TEMPERATURE | | | | |
| STORAGE | | -10°C~+60°C | | |
| TEMPERATU | JRE | | | |

PARTS LIST

| Part | Description | Quantity | Part | Description | Quantity |
|------|------------------------|----------|------|------------------------|----------|
| 1 | Main Frame | 1 | 30 | Beam | 1 |
| 2 | Tension Control Knob 1 | | 31 | Helical Compression Sp | oring 1 |
| 3 | Locking Pin | 3 | 32 | Phillip Screw | 5 |
| 4 | Sleeve | 3 | 33 | Brake Pad Assembl | y 1 |
| 5 | End Cap | 4 | 34 | Sensor Clamp | 1 |
| 6 | End Cap (Seat Slide | er) 1 | 35 | Rubber Absorber | 1 |
| 7 | Bottom Bracket | 1 | 36 | Watter Bottle Hold | er 1 |
| 8L | Crank (L) | 1 | 37 | Self Tapping Screw | 4 |
| 8R | Crank (R) | 1 | 38 | Phillip Screw | 2 |
| 8-1 | Crank Bolt | 2 | 39 | Locked Nut | 2 |
| 8-2 | Crank Cap | 2 | 40 | Transport Wheels | 2 |
| 9 | End Cap (for H/B) | 2 | 41 | Front Stabiliser | 1 |
| 10 | Small Pulley | 1 | 42 | Rear Stabiliser | 1 |
| 11 | Locked Ring | 1 | 43 | Leveling Feet | 4 |
| 12 | Belt | 1 | 44 | Carriage Bolt | 4 |
| 13 | Flywheel | 1 | 45 | Locked Nut | 10 |
| 14 | Flywheel Cover | 2 | 46 | Allen Bolt | 2 |
| 15 | Saddle | 1 | 47 | Square Nut | 1 |
| 16 | Hub Set | 1 | 48 | Washer | 4 |
| 16-1 | Washer | 2 | 49 | Square Plate | 1 |
| 16-2 | Flange Nut | 2 | 50 | Hex Nut | 1 |
| 17 | Chain Tensioner | 2 | 51 | Cap Nut | 1 |
| 18 | Locked Nut | 4 | 52 | Allen Bolt | 1 |
| 19 | Self tapping Screw | 6 | 53 | Foam Grip | 2 |
| 20L | Pedal (L) | 1 | 54 | Big Pulley | 1 |
| 20R | Pedal (R) | 1 | 55 | Spring Washer | 6 |
| 21 | Handlebar | 1 | 56 | Hex Bolt | 6 |
| 22 | Seat Post | 1 | 57 | Hex Bolt | 2 |
| 23 | Seat Slider | 1 | 58 | Console | 1 |
| 24 | Inner Chain Guard | 1 | 59 | Console Bracket | 1 |
| 25 | Outer Chain Guard | 1 | 60 | Self Tapping Screw | 1 |
| 26 | Self Tapping Screw | 1 | 61 | Allen Wrench | 1 |
| 27 | Washer | 6 | 62 | Multi Wrench | 1 |
| 28 | Self Tapping Screw | 5 | 63 | Magnet | 1 |
| 29 | Self Tapping Screw | 1 | | | |

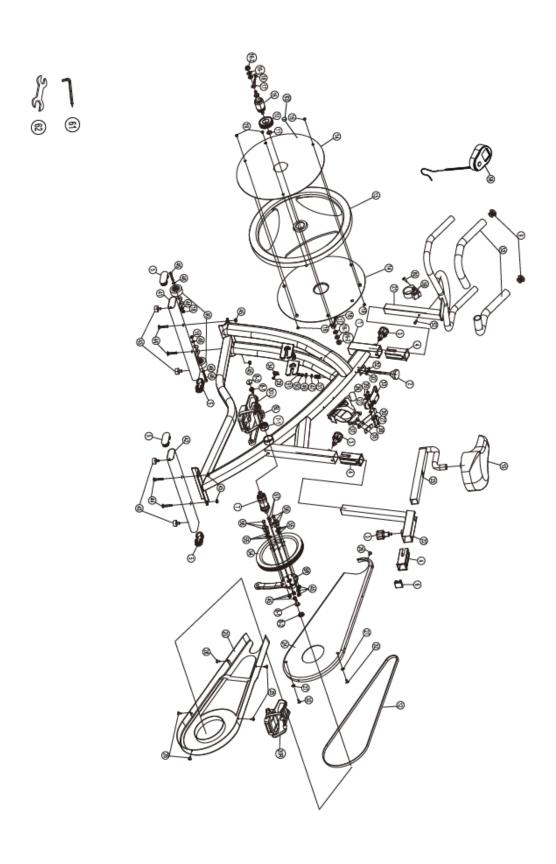



For more information about our Elite exercise equipment or other brands that we stock for your home, visit www.elitefitness.co.nz

Copyright © 2017 Elite Fitness

Elite Fitness, 11 George Bourke Drive, Mt Wellington, Auckland, New Zealand, 0800 243 834, www.elitefitness.co.nz

Keep up to date with the latest products, competitions and equipment, follow us on our social media sites.











@EliteFitnessNZ

@EliteFitnessTV