




ASSEMBLY MANUAL >

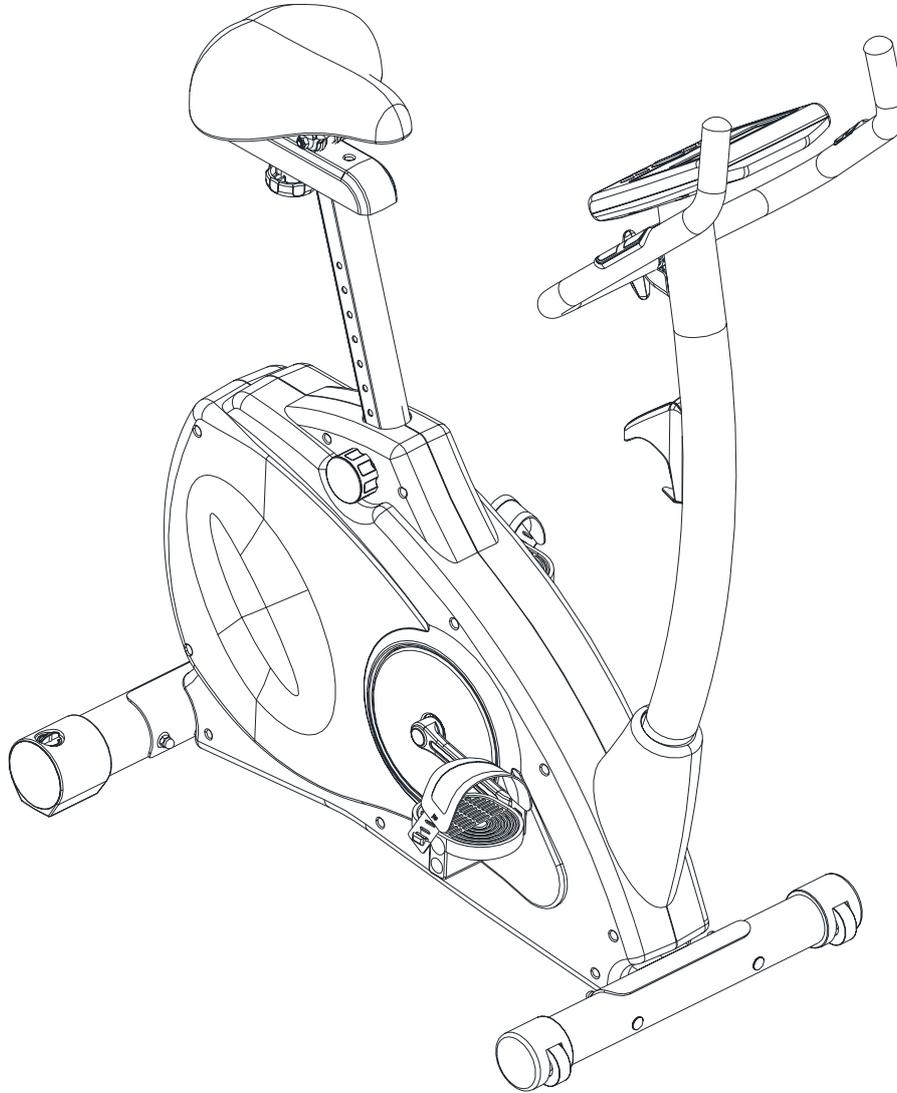

MAGNUM4

Record serial number

Elite Magnum 4 Exercycle

Thank you for purchasing the **Elite Magnum 4 Exercycle** For over 20 years, Elite Fitness™ has been New Zealand's largest supplier of fitness equipment. Our aim and vision is to provide you Elite™ branded products, tested to the highest standard for quality and biomechanics at the best possible price.

Please read through this manual to familiarise yourself with the operation of your **Elite Magnum 4 Exercycle**. Doing so will help to ensure that you get the most out of your machine, enjoying safe and effective workouts ahead.

Even though we go to great efforts to ensure the quality of each product we produce, occasional errors and or omissions do occur. In any event should you find this product to have either a defective or a missing part, please contact us for a replacement.

SERVICE & WARRANTY

For service and warranty assistance please visit:

www.elitefitness.co.nz/service

Online forms are available for Service, Warranty and Parts requests.

(09) 258 9067

Elite Fitness HQ

11 George Bourke Drive

Mt Wellington

Auckland, New Zealand

info@elitefitness.co.nz

0800 2 438 348

www.elitefitness.co.nz

CONTENTS

Important Safety Instructions	3	Care and Maintenance	18
Product Specifications	4	Maintenance Log	19
Hardware List	5	Limited Warranty	20
Assembly Components	6	Warm-Up Exercise	21
Assembly Instructions	7	Training Stages	22
User Instructions	15	Parts	23
Computer	16	Exploded Drawing	24
Seat Adjustment	17	Notes	25

IMPORTANT SAFETY INSTRUCTIONS

The following definition applied to the word “WARNING” when used in this manual:

 **WARNING** Used to call attention to POTENTIAL hazards that could result in personal injury.

READ ALL INSTRUCTIONS BEFORE USING THE MACHINE

This product has been designed for **home use only**. Product liability and warranty conditions will not be applicable to products being subjected to professional use or products being used in a commercial environment. e.g Gym Centre, Retirement Centre, Home Based PT Studio and Physio.

This exercise machine is built for optimum safety. However, certain precautions apply whenever you operate a piece of exercise equipment. Be sure to read the entire manual before you assemble or operate your machine. In particular, note the following safety precautions.

- Read all instructions in this manual before using this equipment.
- Use the machine only for its intended use as described in this Manual.
- Inspect and tighten all the loose parts before this equipment is used.
- Keep hands away from moving parts.
- Keep children and pets away from the machine at all times. **DO NOT** leave children unattended in the same room with the machine.
- Before using the machine to exercise, always do stretching exercises to properly warm up.
- Inspect the machine before each use; make sure all of the connections are tightly secured.
- Only one person at a time should use the machine.
- If the user experiences dizziness, nausea, chest pain, or any other abnormal symptoms, **STOP** the workout at once. **CONSULT A PHYSICIAN IMMEDIATELY.**
- Position the machine on a clear, levelled surface. **DO NOT** use the machine near water or outdoors.
- Always wear appropriate workout clothing when exercising. **DO NOT** wear robes or other clothing that could become caught in the machine. Sporting shoes are recommended when using the machine.
- Do not place any sharp object around the machine.
- Disabled persons should not use the machine without a qualified person or physician in attendance.
- Never operate the machine if the machine is not functioning properly.
- Only carry out training work on the equipment when it is in perfect working order. Only use original spare parts in the event of a repair.
- Do not use strong solvents for cleaning, and only use the tools supplied, or suitable ones of your own, for any repairs that may be required. Please dispose of the packaging and any parts that have to be replaced subsequently (all parts for the unit) at suitable collecting points or containers with a view to saving the environment.
- **DO NOT** extend the seat stem past the warning line “Max” when adjusting the seat height.
- Not for therapeutic use.

WARNING: Before beginning any exercise programme, consult your physician. This is especially important for persons with pre-existing health problems. The seller assumes no responsibility for personal injury or property damage sustained by or through the use of this product.

SERVICE HINTS: The high quality standard of this product only will be kept if you, on a regular basis, check all screw connections and moving parts on proper fitting. Damaged parts need to be changed immediately. During the time of repair the product must not be used by anybody.

IMPORTANT HINTS:

- A) This product has been tested in accordance with the requirements of EN 957-1/A1, EN 957-5, standard, Class HA (HOME USE). The maximum load is limited to 120KGS.
- B) Parents should be aware of the risk factor of young children playing on fitness equipment unattended. Make sure that children are instructed properly in the use of the product and in the controlled execution of the different exercises. Misuse of the product could result in serious injury.

PRODUCT SPECIFICATIONS

User Weight Capacity:	120kg
-----------------------	-------




Dimensions:	1000 x 525 x 1320mm
-------------	---------------------

Shipping Weight:	35.4kg
------------------	--------


Net Weight:	32.5kg
-------------	--------

Power Requirements	6V 1.0A
--------------------	---------

HARDWARE LIST

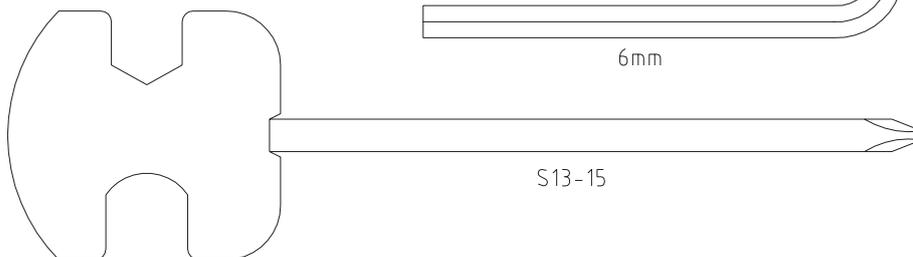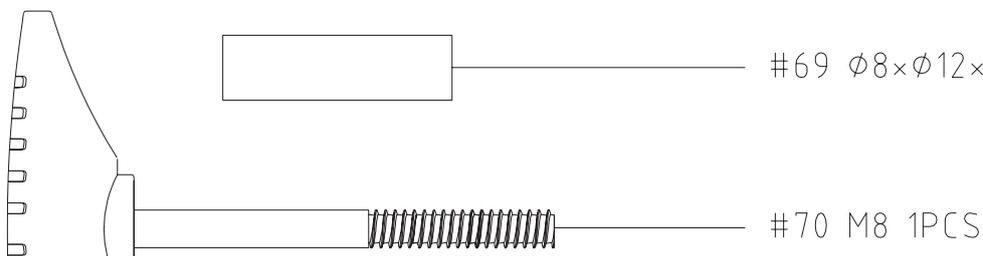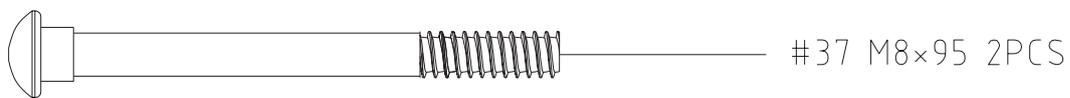

ASSEMBLY INSTRUCTIONS

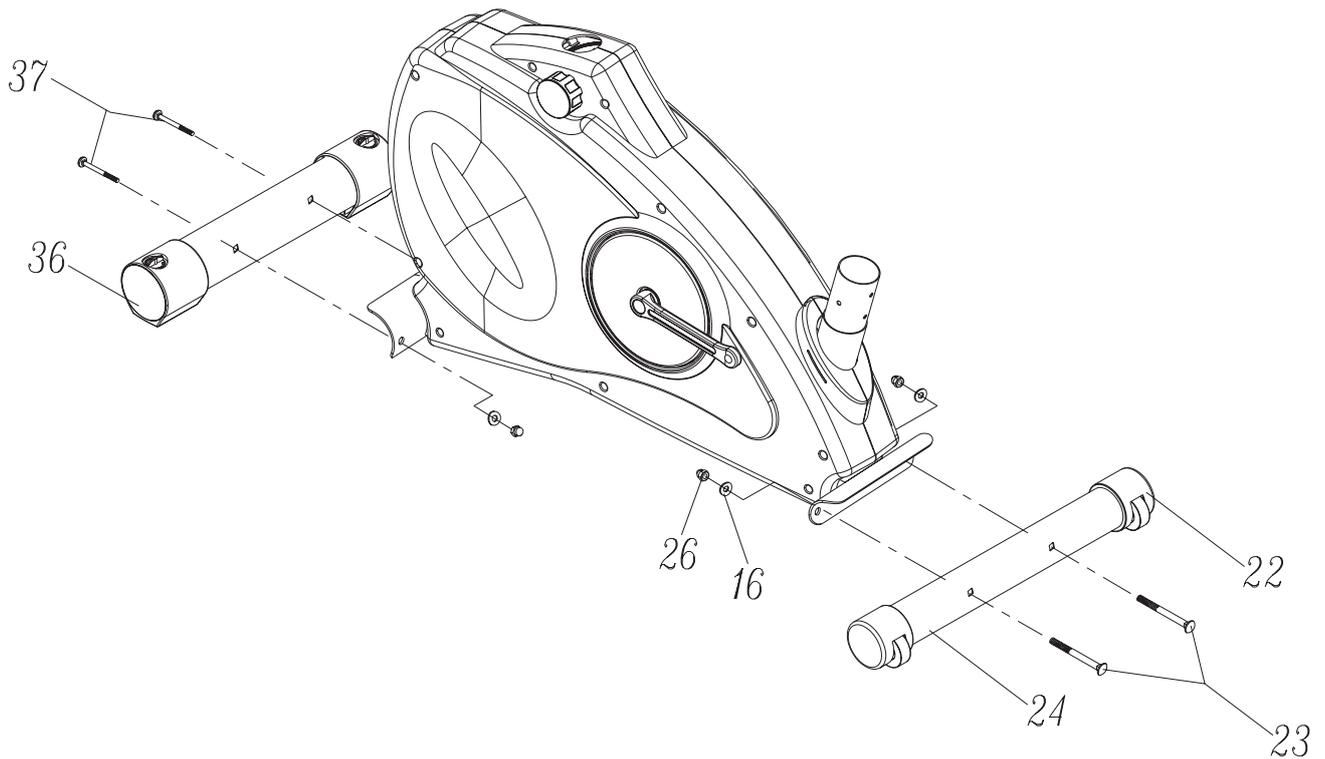


STEP 1

Do not tighten Bolts until instructed to do so.

- Attach the Front Stabiliser (#24) to the Main Frame (#27). Secure it with 2 x Carriage Bolts (#23) 2 x Curved Washers (#16) and 2 x Nuts (#26)
- Attach the Rear Stabiliser (#36) to the Main Frame (#27). Secure it with 2 x Carriage Bolts (#37) 2 x Curved Washers (#16), and 2 x Nuts (#26).
- **Secure all Bolts.**

ASSEMBLY INSTRUCTIONS

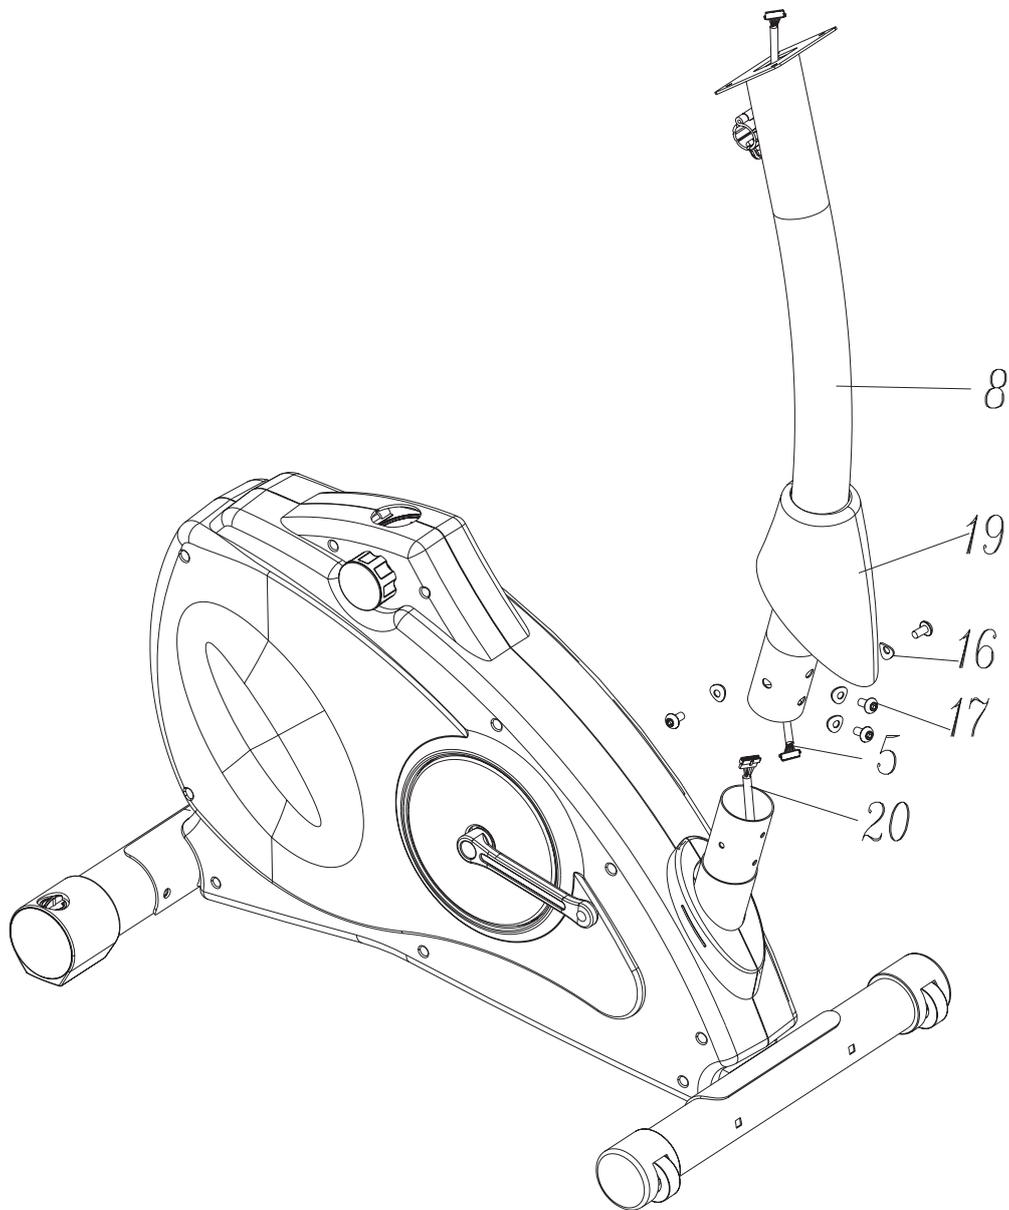


STEP 2

NOTE: Extra help may be needed to hold the Front Post (#8) while connecting the cables and wires.

- Slide the Handlebar Cover (#19) over the Front Post (#8).
- Connect Wire (#20) to Wire (#5).
- Secure the Front Post (#8) to the Main Frame (#27) with 4 x Screws (#17) and 4 x Washers.


ASSEMBLY INSTRUCTIONS

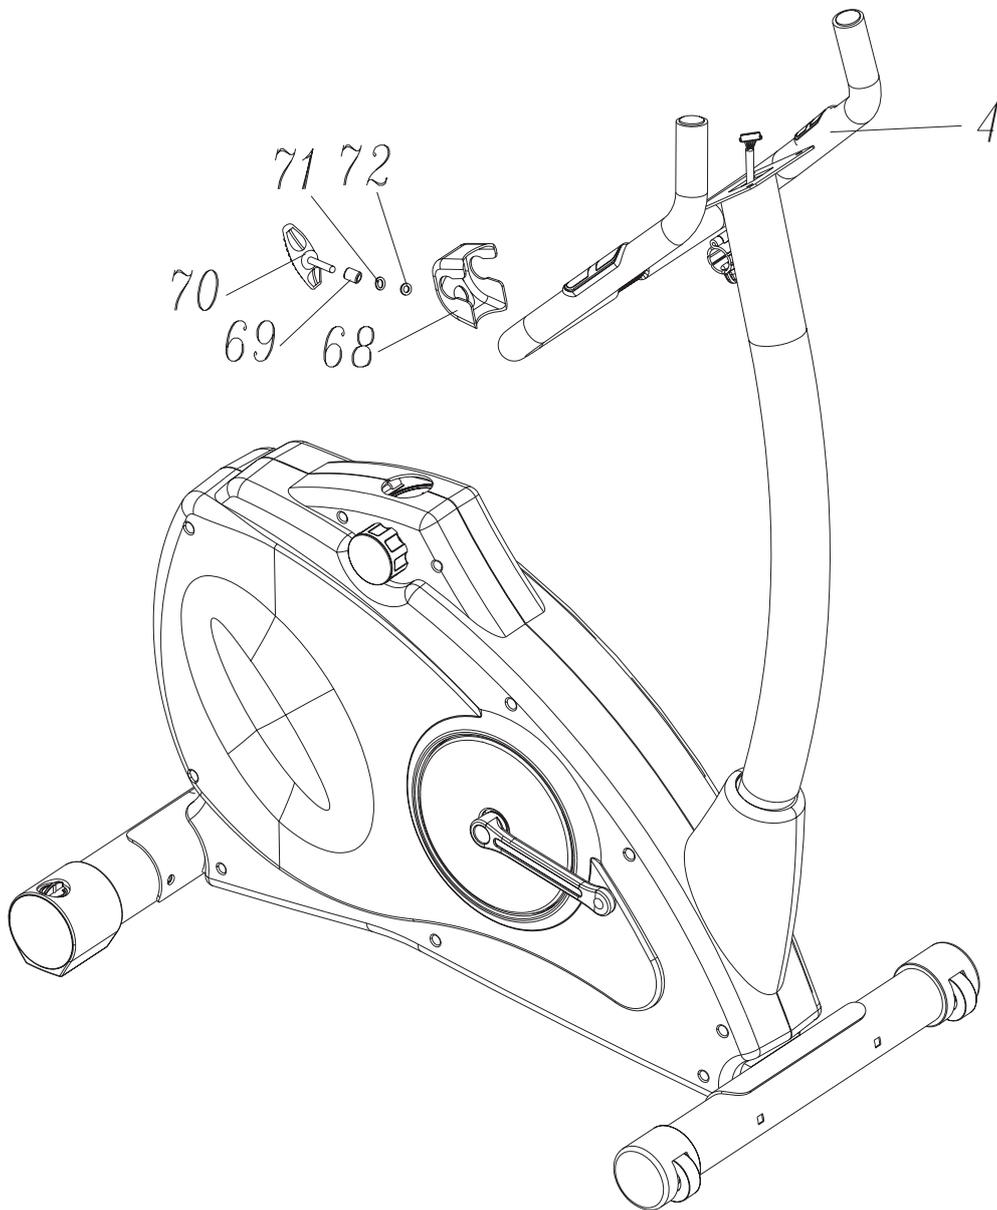

STEP 3

- Attach the Handlebar (#4) to the Front Post (#8). Secure the Plastic Cover (#68) over the Handlebar using the T-Shaped Knob (#70), an Etal Bush (#69), Spring Washer (#71), and a Flat Washer (#72).


ASSEMBLY INSTRUCTIONS

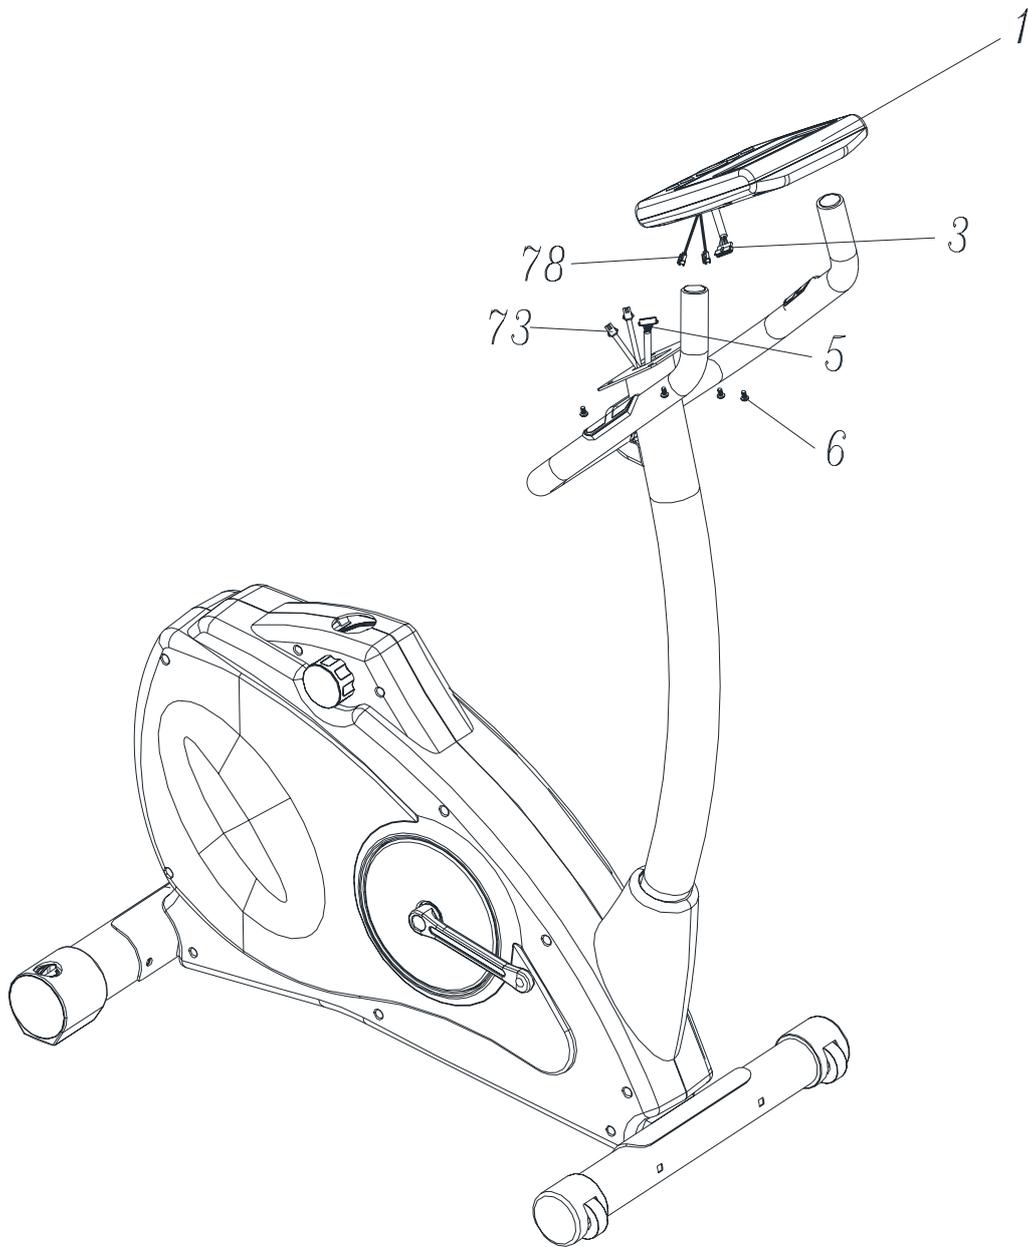

STEP 4


- Connect Upper Computer Wire from Computer (#3) to the Middle Computer Wire (#5) from Front Post. (#8)
- Connect Upper Pulse Wire from Computer (#78) to the Lower Pulse Wire (#73) from Handlebar. (#4)

ASSEMBLY INSTRUCTIONS

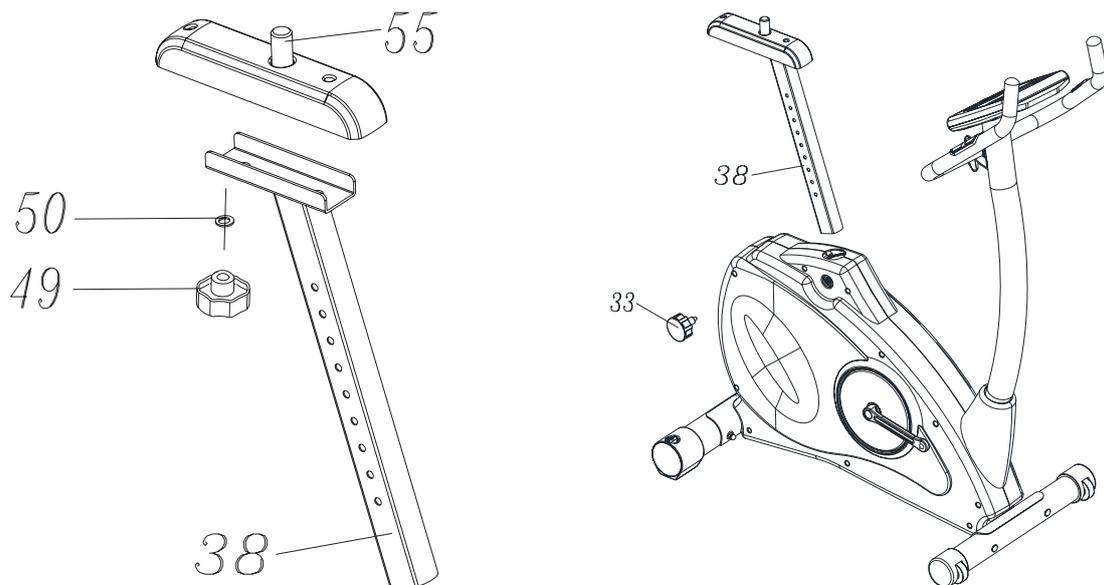

STEP 5


- Insert the Seat Post (#38) into the opening on Main Frame (#27). Securely, lock the Sliding Seat Stem (#55) to the Seat Post (#38) using a Flat Washer (#50) and the Horizontal Knob (#49).
- Refer to fore and aft seat adjustment guide for more information .

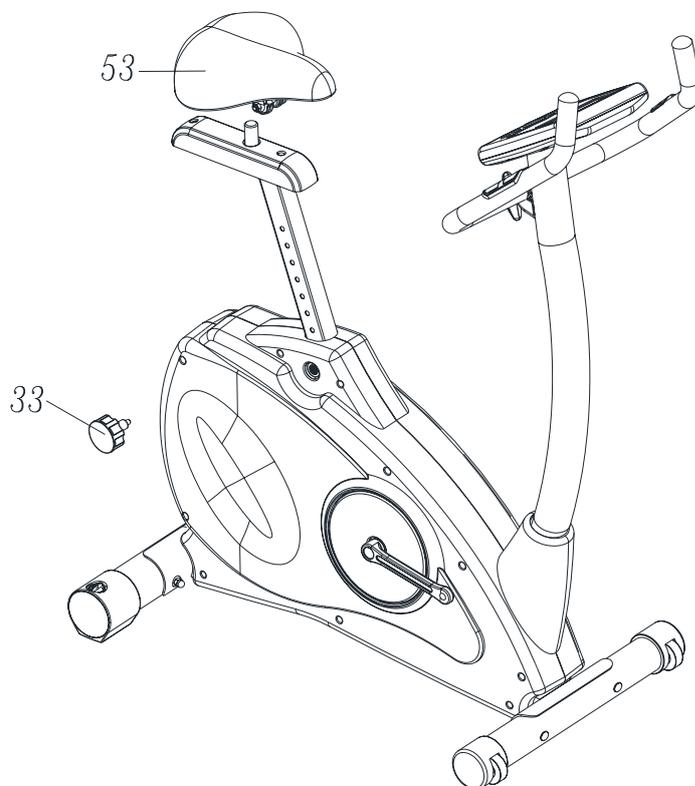

STEP 6

- Secure Seat (#53) to Seat Stem (55). Adjust the tilt accordingly for individual comfort. Tighten the seat nuts securely.


ASSEMBLY INSTRUCTIONS

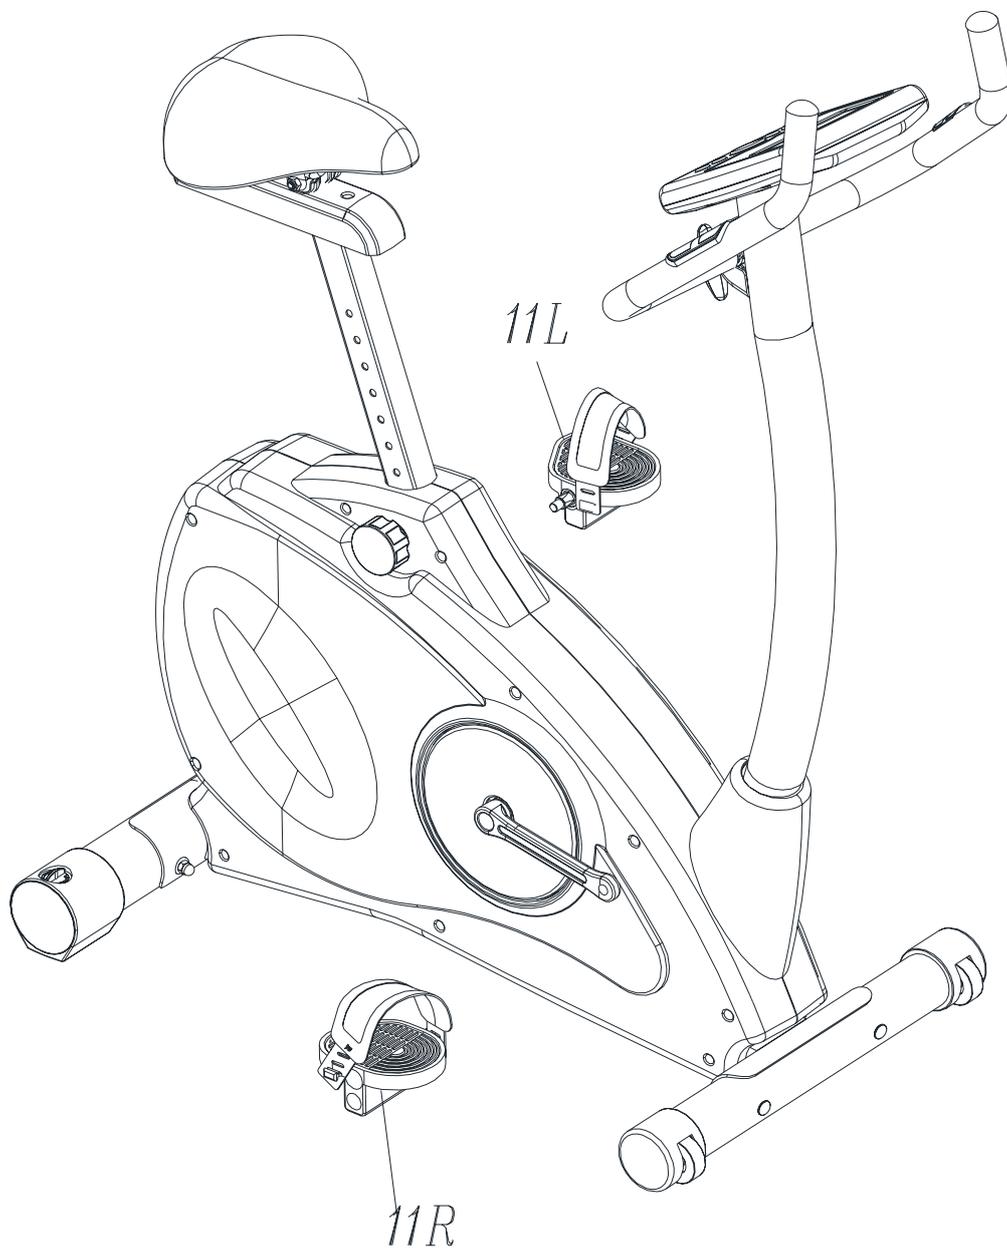

STEP 6

- Thread the Left Pedal (#11L) counterclockwise into the left Crank Arm.
- Thread the Right Pedal (#11R) clockwise into the right Crank Arm.

ASSEMBLY INSTRUCTIONS

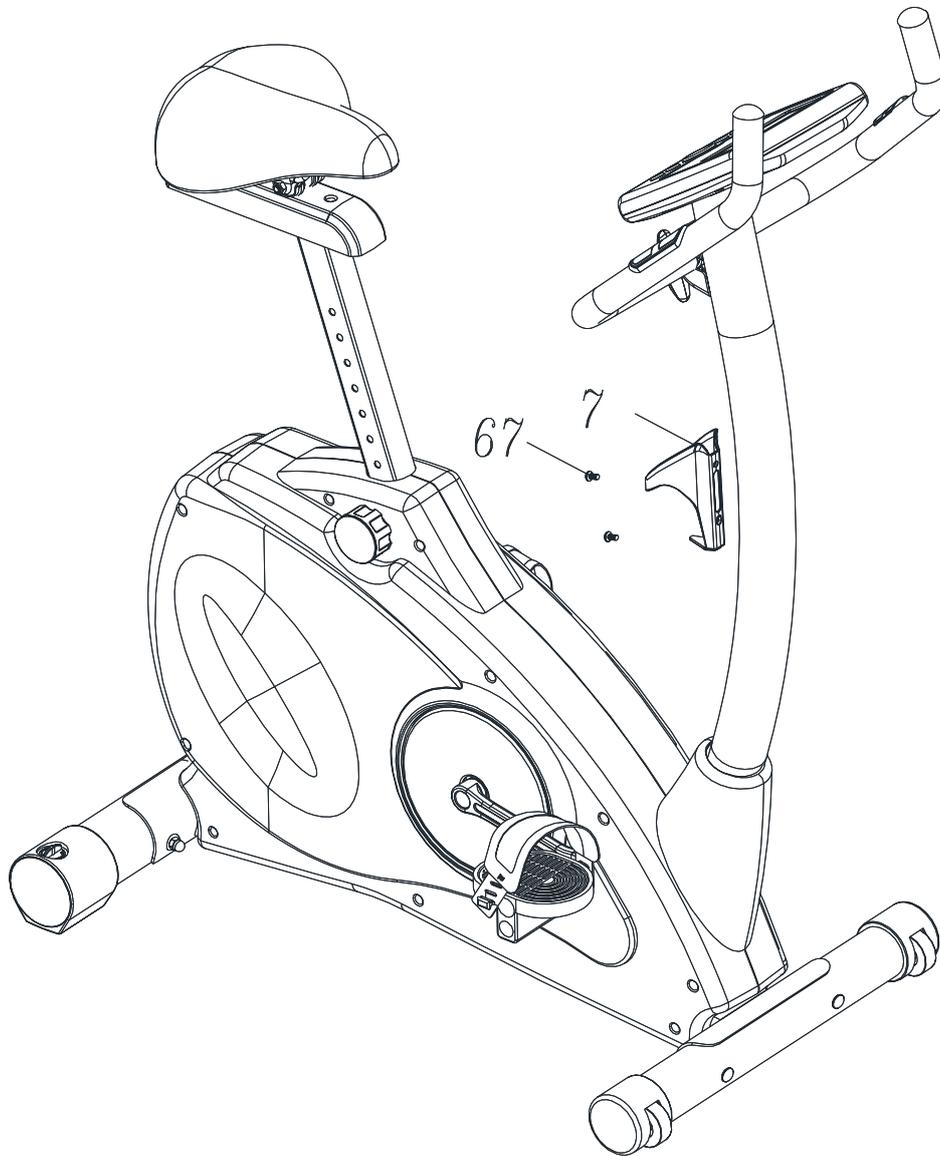


STEP 7

- Attach the Water Bottle Holder (#7) to the Front Post (#8) using 2 x Screws (#67).


CONGRATULATIONS

Assembly of your **Elite Magnum 4 Exercycle** is now complete! Be sure to fully inspect your machine before using it for the first time.

WARNING: Failure to visually check and test the assembly of your exercycle before use can cause damage to the exercycle and injury.

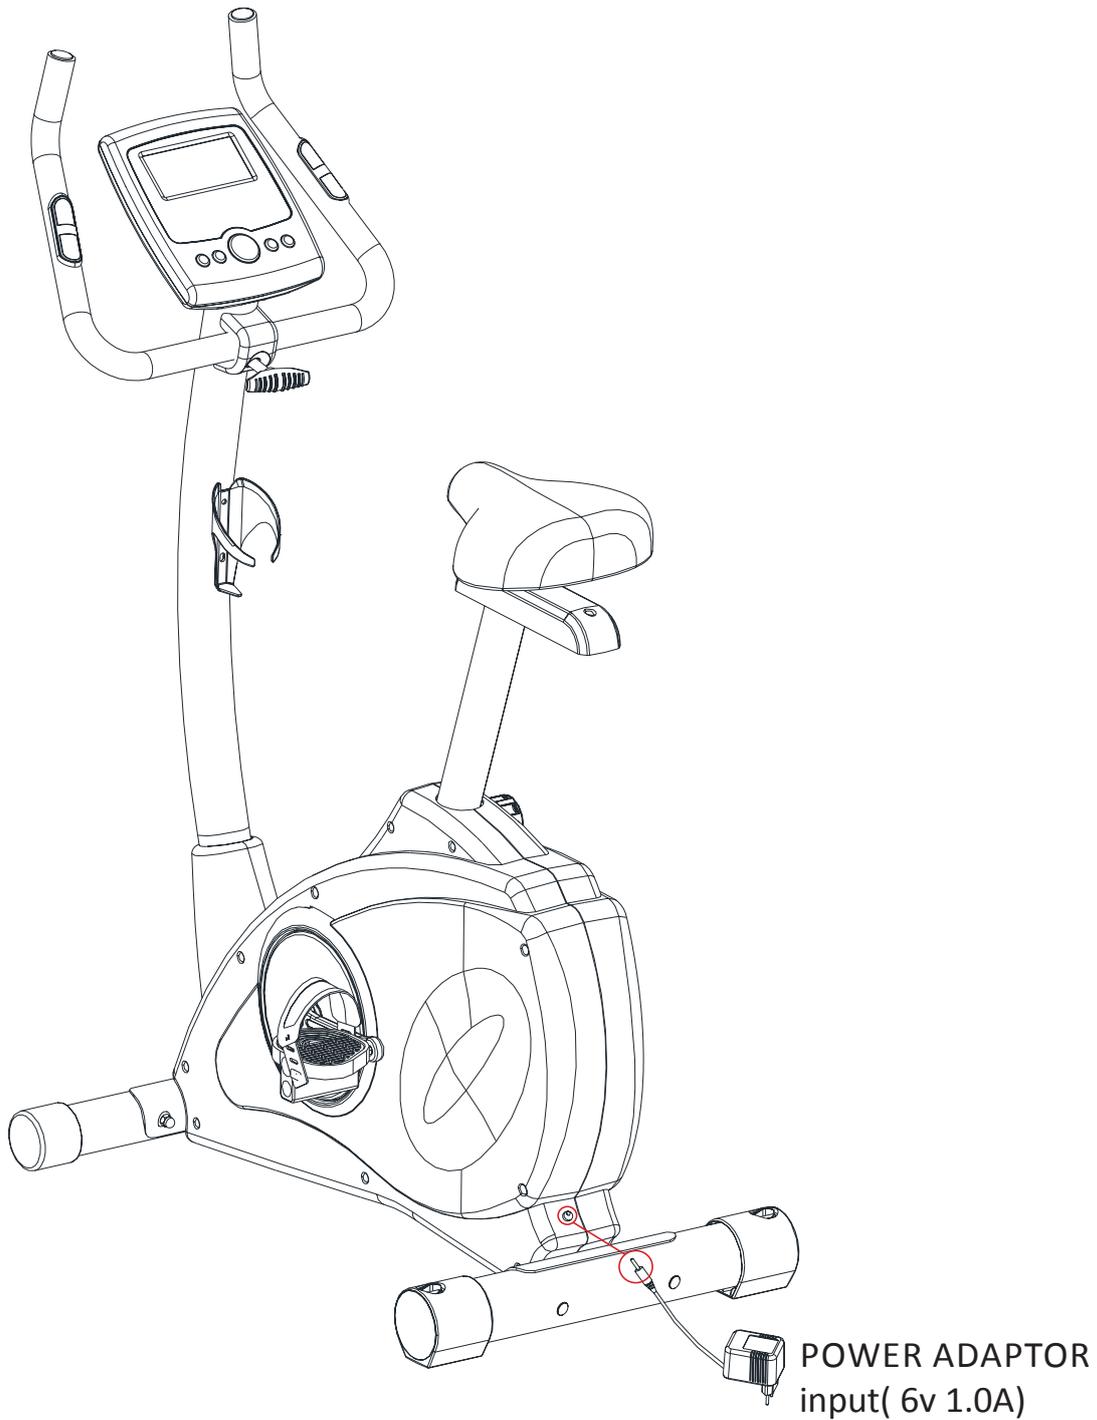


USER INSTRUCTIONS

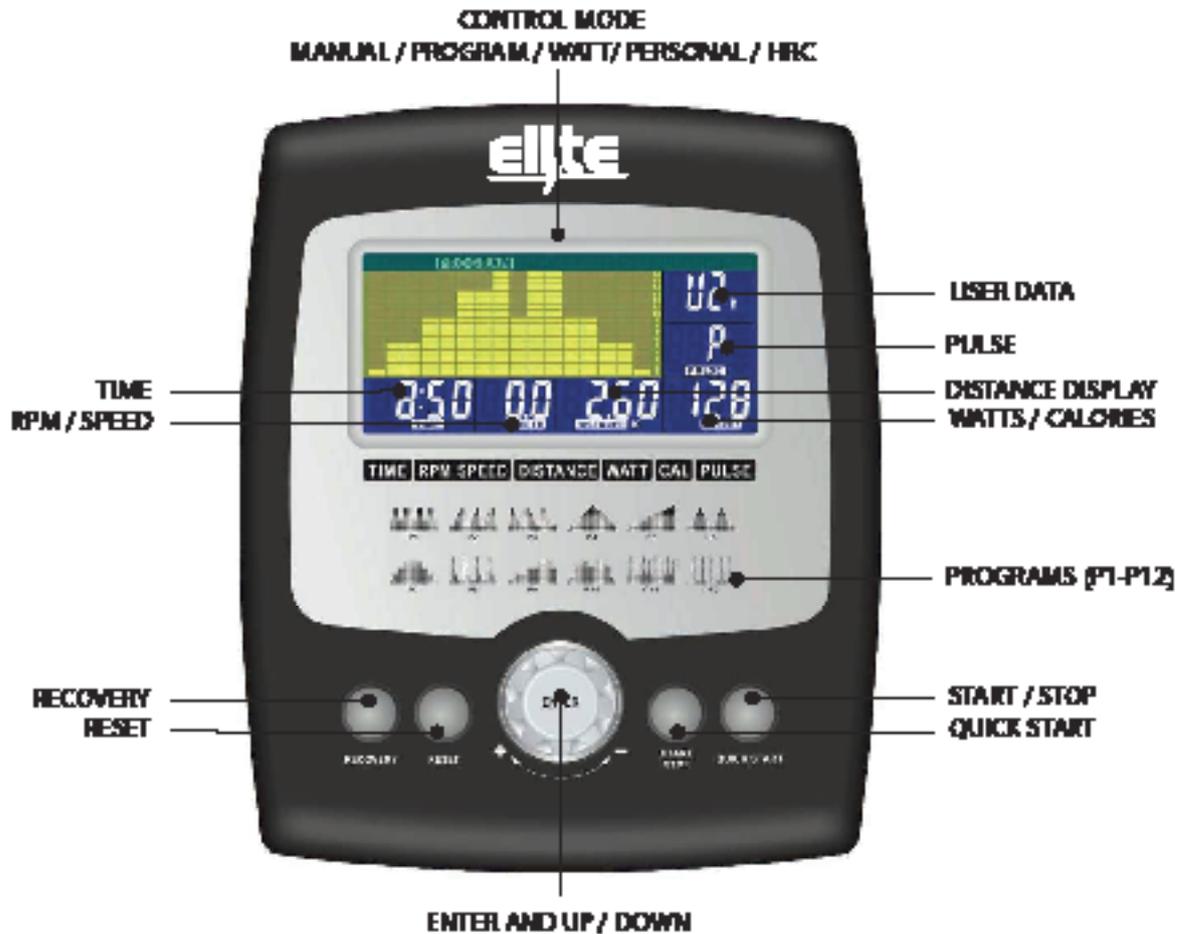

SCAN	: Alternates between WATTS/CALORIES and RPM/SPEED. 6 seconds per display.
RPM	: 0-15-999
SPEED	: 0.0-99.9 km/h
TIME	: 0:00-99:59.
DISTANCE	: 0.00-99.99 km
CALORIES	: 0-999.
PULSE	: P-30-240
HEART SYMBOL	: ON / OFF flashes
MANUAL	: 1-16 level
PROGRAM	: P1-P12
WATTS CONSTANT	: 10-350

COMPUTER

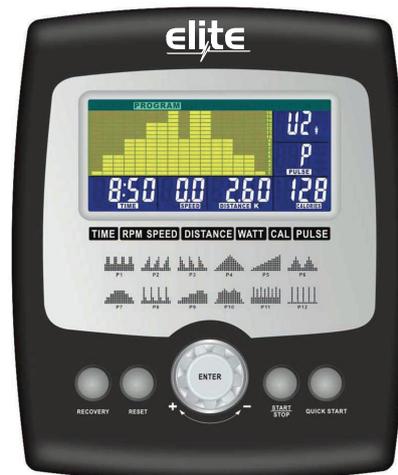

AUTO START / STOP

When exercise starts, the monitor will automatically turn on and display the progress. When exercise stops, the monitor will automatically turn off after 8 minutes to save energy. Press “MODE” key, will automatically scan Time, Speed, Distance, Calories, and ODO for every 4 seconds.

DISPLAY:

- Time Display the elapsed time. Max value is up to 99:59
- Speed Display the current speed in miles per hour.
- Distance Display the distance traveled in Miles. Max value is 99.99 miles.
- Calories Display the calorie consumption in cal.
- (ODO) Odometer Display the accumulation of distance from previous and current exercises. Max value is 9999 miles.

PULSE:

Press MODE button until “PULSE” appears. Before measuring your pulse rate, please place your palms of your hands on Both of your contact pads and the monitor will show your current heart beat rate in beats per minute(BPM) on the LCD after 6~7 seconds.

Note: Contact Heart rate sensors are for reference only and may provide inaccurate readings as they are not medically certified devices. If you require accurate heart rate readings for the purpose of training or a medical condition, please consult your Elite Fitness Sales Professional for further advice

Please note all values on this computer are approximate and they are for comparison purpose only. Do not use these values for any medical or rehabilitation purpose.

SEAT ADJUSTMENT

Having your bike seat adjusted to the right height is essential for a comfortable ride, efficient pedalling and avoiding injury. There are 2 adjustments located on the seat post. The first is a vertical height adjustment, the second is for horizontal seat position. Although there are many methods and opinions on the optimal saddle setting, the following is a quick and easy method to get started. Further adjustments can be made afterwards to optimise your position and comfort.

Saddle Height Adjustment

Place your heels on the bike pedals and pedal backward. Your legs should be fully extended with your knees straight. If your hips rock from side to side while pedalling backward, the seat is too high. Place the ball of your foot on the pedal. There should now be a slight bend in your knee when the pedal is at its lowest point. This is a good starting point.



Saddle Height Adjustment

Adjusting Seat Fore and Aft Position

Once you've adjusted the seat height, it's time to find the correct fore-and-aft position of the saddle. This determines where you sit in relationship to the crank set (where the pedals are attached). This will help determine how comfortable and efficient you'll be when riding and minimises stress to the knee by being in a more neutral position. If you want to check the fore-and-aft setting at home, you will need a second person and a plumb line (a length of string with a nut or washer tied on the end will work fine).

- Whilst sitting on the seat, bring your left crank arm around and have your helper stop the crank when the pedal is at three o'clock or parallel with the floor. For this measurement to be accurate, your shoes must be correctly positioned on the pedals (the balls of your feet should be over the pedal axles).
- Holding this position, have your helper place the end of the plumb line on the front of your leg, at a point just below the bony protrusion beneath the kneecap.
- The plumb line's weight should hang over your shoe. Check again to ensure that the crank-arm and pedal are level. By looking at the plumb line the knee should be in alignment with the centre spindle or axle of the pedal.
- Adjust the saddle to the correct position then tighten the locking pin.

CARE AND MAINTENANCE



WARNING

IMPORTANT INFORMATION

Before cleaning or carrying out any maintenance on your exercycle, ensure the power is turned off and the power cord removed from the plug socket.

Prolong the life of your exercycle by performing periodic maintenance checks. Not only does this ensure your machine is in full working order to ensure they continue to run smoothly and reliably, but it will save you service costs in the long run.

Cleaning

General cleaning of the unit after use will protect the bike's powder-coated framework and prevent unnecessary corrosion stains and damage to the structural components from sweat and perspiration.

Please ensure all sweat residue is wiped from any contact points or framework with a damp cloth using a suitable PH neutral detergent in water to avoid salt and corrosion deposits on your equipment. Failure or neglect to maintain and clean sweat residue from the bike frame may affect any frame warranty implied.

Frame and Pedals

Check all nuts and bolts securing the framework, seat and handlebar assemblies are tight.

Ensure the pedals are securely attached to the crank arms. When tightening pay attention to the reverse thread (tightening anti-clockwise) on the left hand pedal assembly, when sitting on the bike. Be careful not to strip or force the pedal thread when tightening.

LIMITED WARRANTY

Warranty Range

Damage in correct maintenance and normal operations (not factitious factors). Warranty card to the original purchaser, shall not be transferred.

Warranty Time

HOME USE ONLY. This bike is not designed for commerical use.

- 10 Year Frame
- 1 Year Parts and Labour

The following conditions are not under warranty range:

- A) As a result of abuse, neglect, accident, or unauthorized modification;
- B) The damage due to incorrect adjustment of the machine;

Repair and Maintenance Service

Please contact our Elite Fitness Service Department at eliteservice@elitefitness.co.nz or visit www.elitefitness.co.nz for any service related issues or advice on preventative maintenance servicing procedures.

WARM-UP EXERCISE

Warm up exercise is important in preparing the muscles for activity whilst minimising the risk of injury. You may choose to warm up with a light/brisk walking pace for 5-10 minutes before stopping and performing some simple stretches. (As shown in the pictures below)

— **Hamstring Stretch (Standing)**

Keep your knees slightly bent and slowly lean forward, back and shoulders relaxed, reaching towards your toes. You should feel the tension and slight discomfort in your hamstring muscles. Hold for 15-20 seconds. Repeat 2-3 times.

— **Hamstrings Stretches (Seated)**

Sitting on the floor preferably on a mat, put one leg straight, the other inward and close to the inside of the straight leg. Lean forward from the hips, reaching towards your toes. Hold for 10-15 seconds, and relax. Repeat 3 times for each leg (See picture 2).

— **Crus and Feet Tendon Stretches**


Standing with two hands on the wall or tree, one leg behind. Keeping your legs straight and the heel on the ground, lean forward towards the wall or tree. Hold for 10-15 seconds, and relax. Repeat 3 times for each leg (See picture 3).

— **Quadriceps Stretches**

Keeping your balance with your left hand holding onto a wall or stationery fixture, grasp your right foot with your right hand and stretch your right heel toward your buttocks slowly, until you feel the stretch in the front of your thigh. Hold for 10-15 seconds, and relax. Repeat 3 times for each leg (See picture 4).

— **Sartorius (Inner Muscles of the Thigh) Muscle Stretches**

Sitting down with the soles of your feet or shoes together and your knees positioned outward. Pull your feet towards your groin until you can feel the stretch. Hold for 10-15 seconds, and relax. Repeat 3 times (See picture 5).

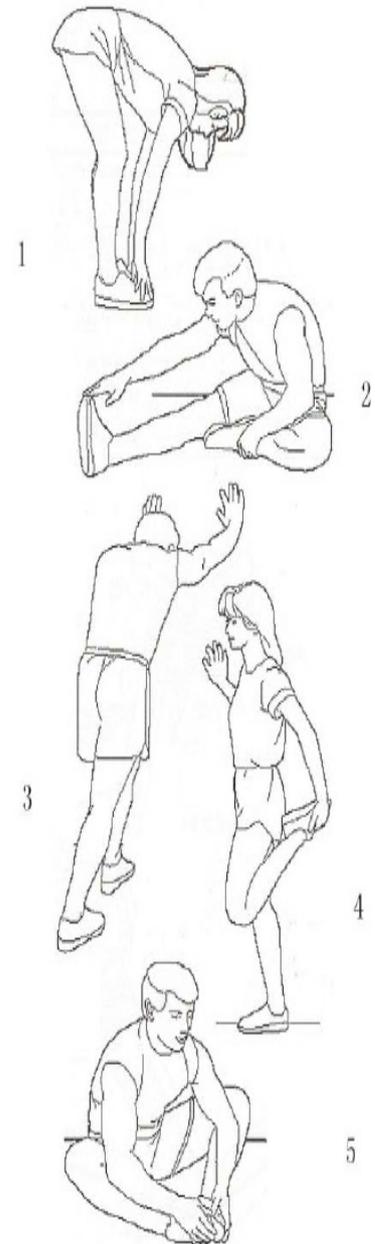

TRAINING STAGES

		Exercise Zone									
		AGE									
Beats Per Minute	100%	200	195	190	185	180	175	170	165	155	150
		VO2 Max (Maximum Effort)									
	90%	180	176	171	167	162	158	153	149	140	135
		Anaerobic (Hardcore Training)									
	80%	160	156	152	148	144	140	136	132	124	120
		Aerobic (Cardio Training/Endurance)									
	70%	140	137	133	130	126	123	119	116	109	105
		Weight Control (Fitness/Fat Burn)									
	60%	120	117	114	111	108	105	102	99	93	90
		Moderate Activity (Maintenance/Warm up)									
50%	100	98	95	93	90	88	85	83	78	75	

Cardiovascular training plays an important part in maintaining a healthy heart and lung function, so it's no surprise we should be paying attention to how quickly our heart beats during exercise. The chart above outlines a range of heart rate training zones determined by the individual's age and workout goals to ensure you train safely and effectively.

Heart Rate can be measured by using the radial (wrist) or carotid (neck) pulse using your index and middle fingers, counting the beats for 10 seconds and multiplying by 6. Alternatively, the use of a Wireless Telemetry Heart Rate strap and watch will give you an accurate Beats Per Minute (BPM) reading.

$220 - \text{AGE} = \text{TMHR}$ (Theoretical Maximum Heart Rate)

$\text{TMHR} \times 85\% = \text{(Upper Training Limit) BPM}$

$\text{TMHR} \times 65\% = \text{(Lower Training Limit) BPM}$

Note: Contact heart rate may provide inaccurate readings and is designed only as a guide

Example: $220 - 39 = 181 \text{ BPM}$

$181 \times 85\% (0.85) = 154 \text{ BPM}$ (Upper Training Limit)


$181 \times 65\% (0.65) = 118 \text{ BPM}$ (Lower Training Limit)

PARTS

We recommend 2 people assist in assembling this unit. Place all parts of the exercycle in a cleared area and remove the packing materials. Do not dispose of the packing materials until assembly is completed. Before you start installation, inspect and prepare all parts and screws featured in this manual. When you open the carton, you will find the following parts:

PART NO.	DESCRIPTION	Q'TY	PART NO.	DESCRIPTION	Q'TY
1	COMPUTER	1	40	SCREW FOR FLYWHEEL	3
2	END CAP	2	41	METAL BUSH	1
3	UPPER COMPUTER WIRE	1	42	BEARING	1
4	HANDLEBAR	1	43	BEARING	2
5	WIRE	2	44	FLYWHEEL	1
6	SCREW	4	45	ONE-WAY BEARING	1
7	WATER BOTTLE HOLDER	1	46	SMALL PULLEY FOR BELT	1
8	FRONT POST	1	47	BEARING	1
9	COVER	2	48	AXLE FOR FLYWHEEL	1
10	CRANK ARM(L)	1	49	HORIZONTAL KNOB	1
11	PEDAL (L&R)	1	50	FLAT WHSHER	1
12	COVER FOR CRANK	2	51	FIXING BOLT	1
13	SCREW FOR CRANK ARM	2	52	COVER	1
14	CHAIN COVER (L)	1	53	SEAT	1
15	SCREW FOR CHAIN COVER	6	54	SCREW	1
16	WASHER	8	55	SEAT STEM	1
17	SCREW FOR HANDLEBAR POST	4	56	PLASTIC SLEEVE FOR SEAT POST	1
18	MOTOR	1	57	WAVE WASHER	1
19	HANDLEBAR COVER	1	58	FLAT WASHER	1
20	WIRE	1	59	C-SHAPE BUCKLE	1
21	DC WIRE	1	60	SPRING FOR IDDLE	1
22	TRANSPORTATION WHEEL	2	61	NYLON NUT	1
23	CARRIAGE BOLT	2	62	IDLER CLAMPING	1
24	FRONT STABILIZER	1	63	FLAT WASHER	1
25	MAGNETIC BRAKE SYSTEM	1	64	SCREW FOR IDDLE	1
26	NUT FOR CARRIAGE BOLT	4	65	IDLER WHEEL	1
27	MAIN FRAME	1	66	METAL BUSH	2
28	BEARING	2	67	SCREW	1
29	BIG PULLEY	1	68	PLASTIC COVER FOR HANDLEBAR	1
30	AXLE FOR CRANK ARM	1	69	ETAL BUSH FOR HANDLEBAR	1
31	BELT	1	70	T-SHAPE KNOB	1
32	SCREW FOR BIG PULLEY	3	71	SPRING WASHER	2
33	KNOB FOR SEAT POST	1	72	FLAT WASHER	1
34	ADJUSTABLE END CAP	2	73	LOWER PULSE WIRE	1
35	SCREW FOR FOOT CAP	2	74	SCREW FOR CHAIN COVER	7
36	REAR STABILIZER	1	75	SCREW	8
37	CARRIAGE BOLT	2	76	SLEEVE	1
38	SEAT POST	1	77	CABLE	1
39	NUT FOR FLYWHEEL	2	78	UPPER PULSE WIRE	2

EXPLODED DRAWING

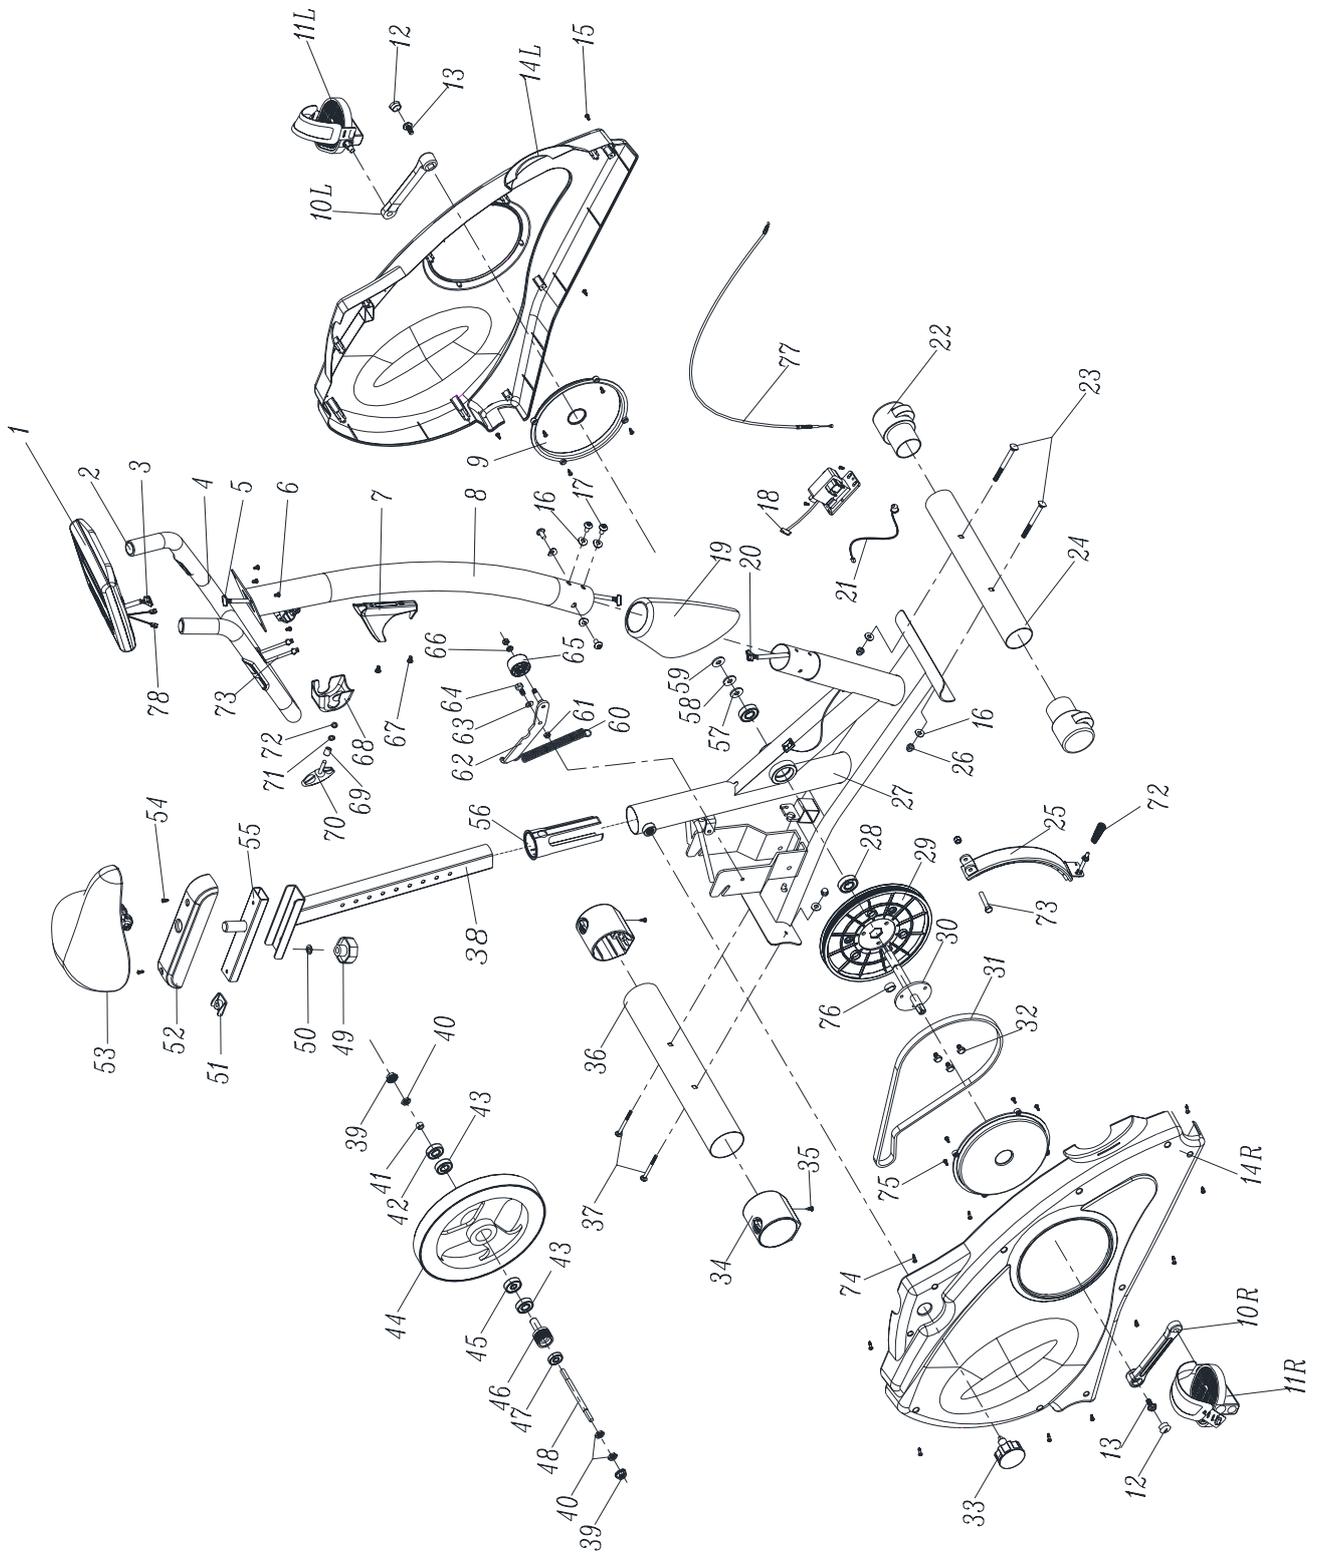



For more information about our Elite exercise equipment or other brands that we stock for your home, visit www.elitefitness.co.nz

Copyright © 2015 Elite Fitness

Elite Fitness, 11 George Bourke Drive, Mt Wellington, Auckland, New Zealand,
0800 243 834, www.elitefitness.co.nz

Keep up to date with the latest products, competitions and equipment, follow us on our social media sites.

