




ULTRA SLP

• SLIMLINE SERIES •

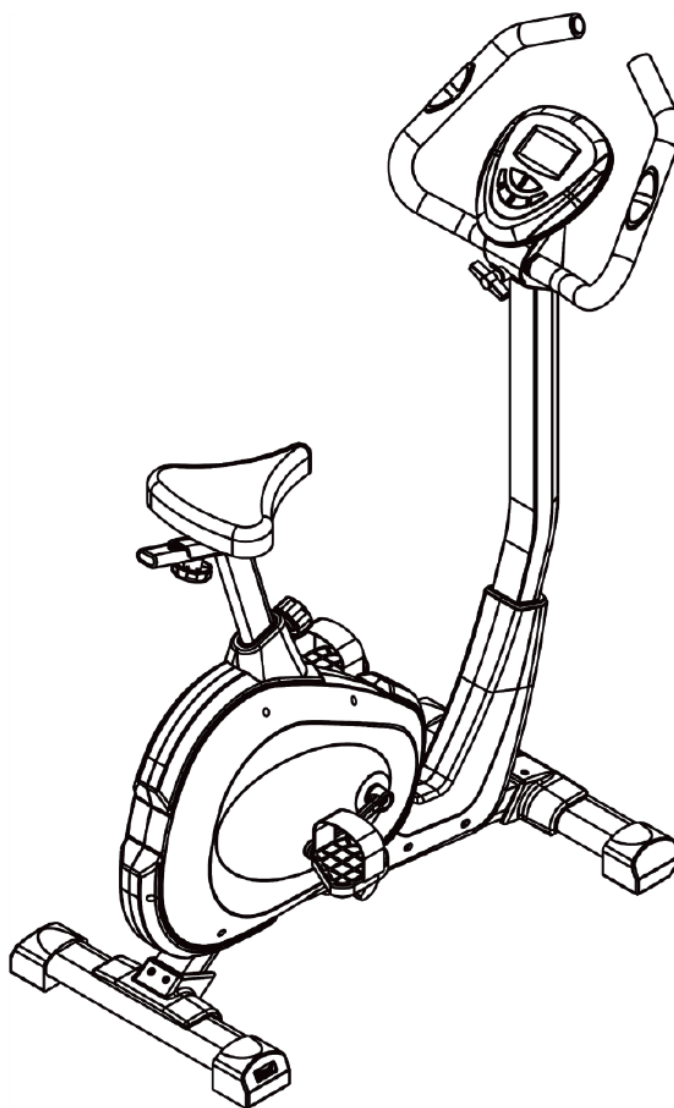

Record serial number

Elite Ultra SLP Exercycle

Thank you for purchasing the **Elite Ultra SLP Exercycle**.

For over 20 years, Elite Fitness™ has been New Zealand's largest supplier of fitness equipment. Our aim and vision is to provide you Elite™ branded products, tested to the highest standard for quality and biomechanics at the best possible price.

Please read through this manual to familiarise yourself with the operation of your new **Elite Ultra SLP Exercycle**. Doing so will help to ensure that you get the most out of your machine, enjoying safe and effective workouts ahead.

Even though we go to great efforts to ensure the quality of each product we produce, occasional errors and or omissions do occur. In any event should you find this product to have either a defective or a missing part, please contact us for a replacement.

SERVICE & WARRANTY

For service and warranty assistance please visit:

www.elitefitness.co.nz/service

Online forms are available for Service, Warranty and Parts requests.

(09) 258 9067

Elite Fitness HQ

11 George Bourke Drive

Mt Wellington

Auckland, New Zealand

info@elitefitness.co.nz

0800 2 438 348

www.elitefitness.co.nz

CONTENTS

Important Safety Instructions	3	Limited Warranty	13
Product Specifications	4	Warm-Up Exercise	14
Assembly Instructions	5	Training Stages	15
Seat Adjustment	10	Parts	16
Care and Maintenance	11	Parts List	18
Maintenance Log	12	Exploded Drawing	19

IMPORTANT SAFETY INSTRUCTIONS

The following definition applied to the word “WARNING” when used in this manual:



WARNING

Used to call attention to POTENTIAL hazards that could result in personal injury.

READ ALL INSTRUCTIONS BEFORE USING THE MACHINE

This product has been designed for home use only. Product liability and warranty conditions will not be applicable to products being subjected to professional use or products being used in a commercial environment. e.g Gym Centre.

This exercise machine is built for optimum safety. However, certain precautions apply whenever you operate a piece of exercise equipment. Be sure to read the entire manual before you assemble or operate your machine. In particular, note the following safety precautions.

- Read all instructions in this manual before using this equipment.
- Use the machine only for its intended use as described in this Manual.
- Inspect and tighten all the loose parts before this equipment is used.
- Keep hands away from moving parts.
- Keep children and pets away from the machine at all times. **DO NOT** leave children unattended in the same room with the machine.
- Before using the machine to exercise, always do stretching exercises to properly warm up.
- Inspect the machine before each use; make sure all of the connections are tightly secured.
- Only one person at a time should use the machine.
- If the user experiences dizziness, nausea, chest pain, or any other abnormal symptoms, **STOP** the workout at once. **CONSULT A PHYSICIAN IMMEDIATELY.**
- Position the machine on a clear, levelled surface. **DO NOT** use the machine near water or outdoors.
- Always wear appropriate workout clothing when exercising. **DO NOT** wear robes or other clothing that could become caught in the machine. Sporting shoes are recommended when using the machine.
- Do not place any sharp object around the machine.
- Disabled persons should not use the machine without a qualified person or physician in attendance.
- Never operate the machine if the machine is not functioning properly.
- Only carry out training work on the equipment when it is in perfect working order. Only use original spare parts in the event of a repair.
- Do not use strong solvents for cleaning, and only use the tools supplied, or suitable ones of your own, for any repairs that may be required. Please dispose of the packaging and any parts that have to be replaced subsequently (all parts for the unit) at suitable collecting points or containers with a view to saving the environment.
- **DO NOT** extend the seat stem past the warning line “Max” when adjusting the seat height.
- Not for therapeutic use.

WARNING: Before beginning any exercise programme, consult your physician. This is especially important for persons with pre-existing health problems. The seller assumes no responsibility for personal injury or property damage sustained by or through the use of this product.

SERVICE HINTS: The high quality standard of this product only will be kept if you, on a regular basis, check all screw connections and moving parts on proper fitting. Damaged parts need to be changed immediately. During the time of repair the product must not be used by anybody.

IMPORTANT HINTS:

- A) This product has been tested in accordance with the requirements of EN 957-1/A1, EN 957-5, standard, Class HA (HOME USE). The maximum load is limited to 135KGS.
- B) Parents should be aware of the risk factor of young children playing on fitness equipment unattended. Make sure that children are instructed properly in the use of the product and in the controlled execution of the different exercises. Misuse of the product could result in serious injury.

PRODUCT SPECIFICATIONS

User Weight Capacity: 135kg


Dimensions:

Shipping Weight:

Net Weight:


Power Requirements:

ASSEMBLY INSTRUCTIONS

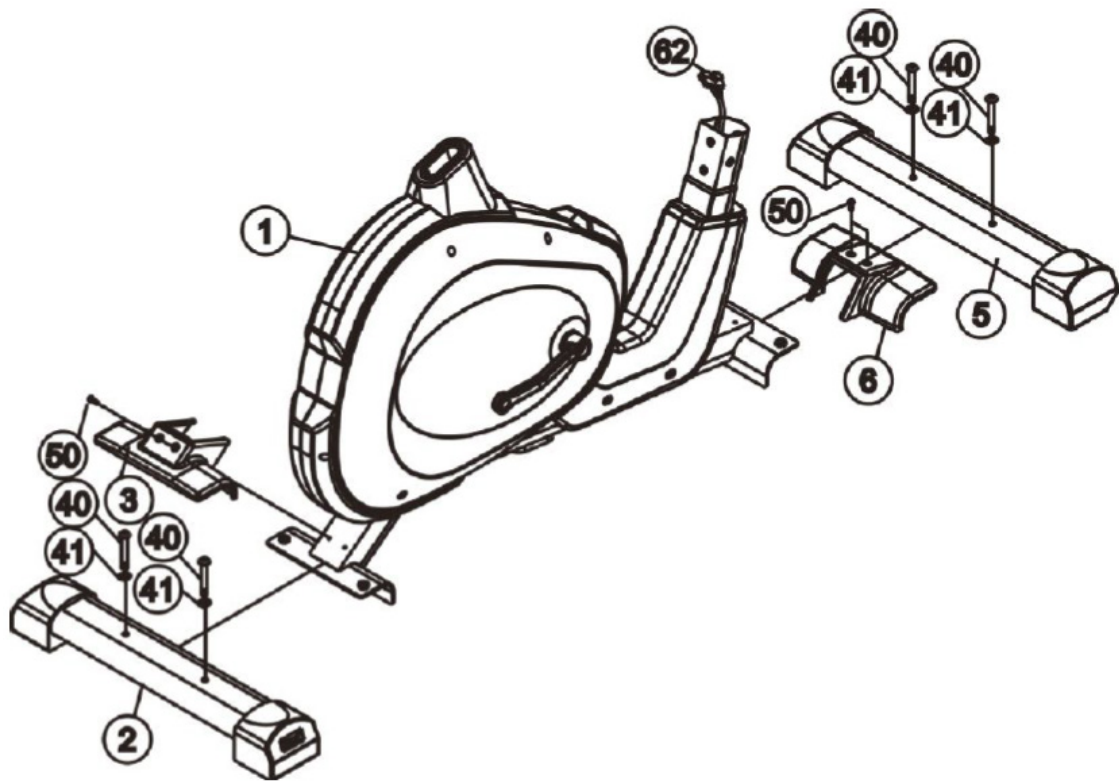

STEP 1: ATTACH THE STABILISERS

- Attach Rear Stabiliser (2) with 2 Adjustment End Caps (4) to the welded cross bar bracket of Main Frame (1) and fasten with 2 Flat Washers (41) and 2 Carriage Bolts (40).
- Attach Front Stabiliser (5) with 2 Transportation Wheels (7) to the welded cross bar bracket of Main Frame (1) and fasten with 2 Flat Washers (41) and 2 Carriage Bolts (40).
- Connect the Front Stabiliser Cover (6) to the welded cross bar bracket and fasten with 2 Screws (50).
- Connect the Rear Stabiliser Cover (3) to the welded cross bar bracket and fasten with 2 Screws (50).

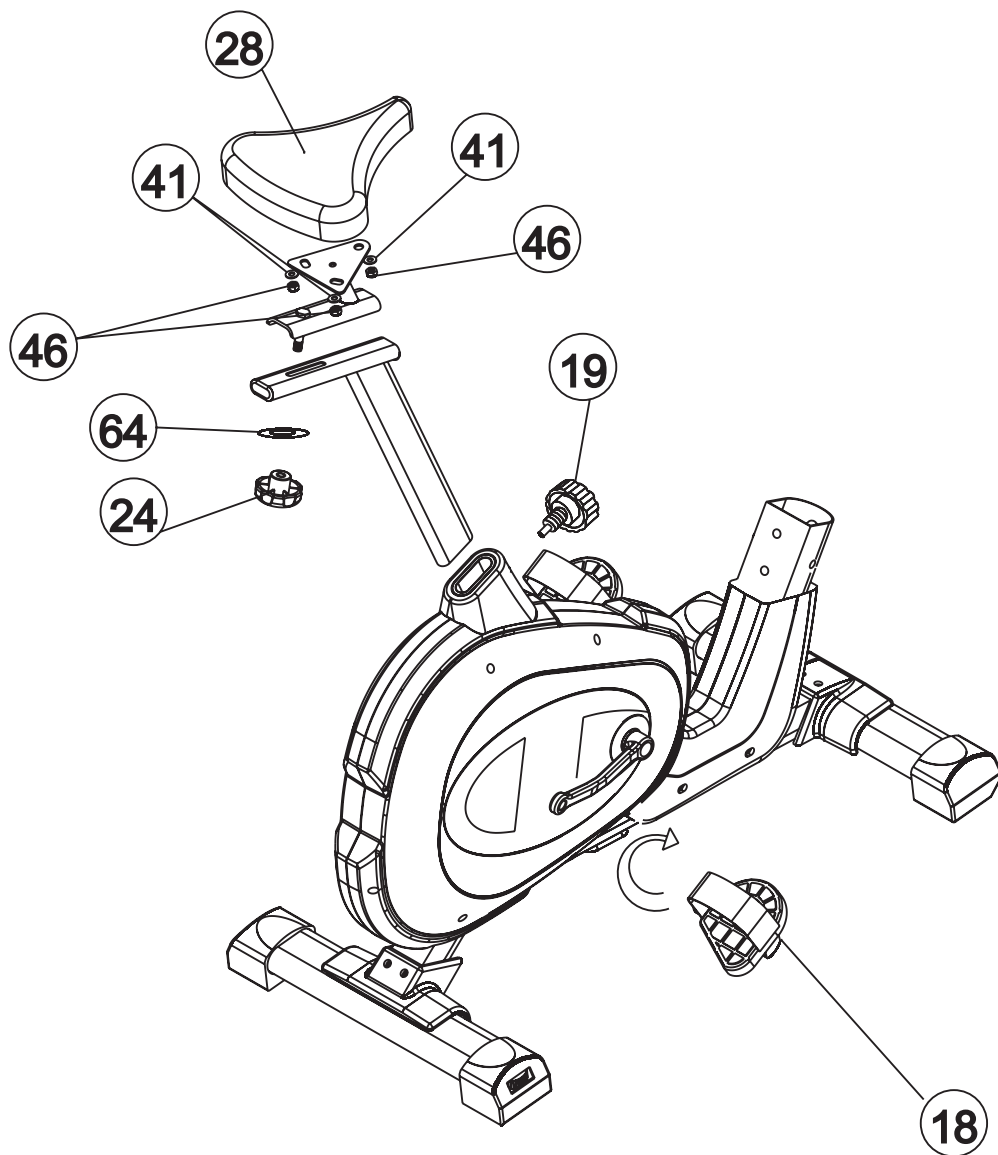

STEP 2: ATTACH THE SEAT & SEAT POST


- Remove the pre-assembled Nylon Nuts (46) and Flat Washer (41) from back of the Seat (28). Fix the Seat (28) with the top seat Sliding Bracket (27) and fasten with Nylon Nut (46) and Flat Washer (41).
- Remove the pre-assembled M10 Knob (24) and Flat Washer (64) from back of the seat Sliding Bracket (27). Fix the seat Sliding Bracket (27) with the top bracket of Seat Tube (23) and fasten with M10 Knob (24) and Flat Washer (64).
- Attach Seat Tube (23) and Rear Cover (21) into the Main Frame (1) and secure in right position with the seat post Quick Release Knob (19). Adjust the height of seat by selecting the corresponding hole in seat tube.

NOTE: *DO NOT extend the seat stem past the warning line “MAX” when adjusting the seat height.*

- Connect each Pedal (18R & 18L) to the crank. Attach Pedal “R” to right side of crank, Pedal “L” to left side of crank. Note the “R” & “L” markings (right and left) on the pedals (18R & 18L) and crank.

NOTE: *The right pedal “R” should be threaded on clockwise. The left pedal “L” should be threaded on counterclockwise.*



- Attach the pedal straps to the pedals (18R & 18L).

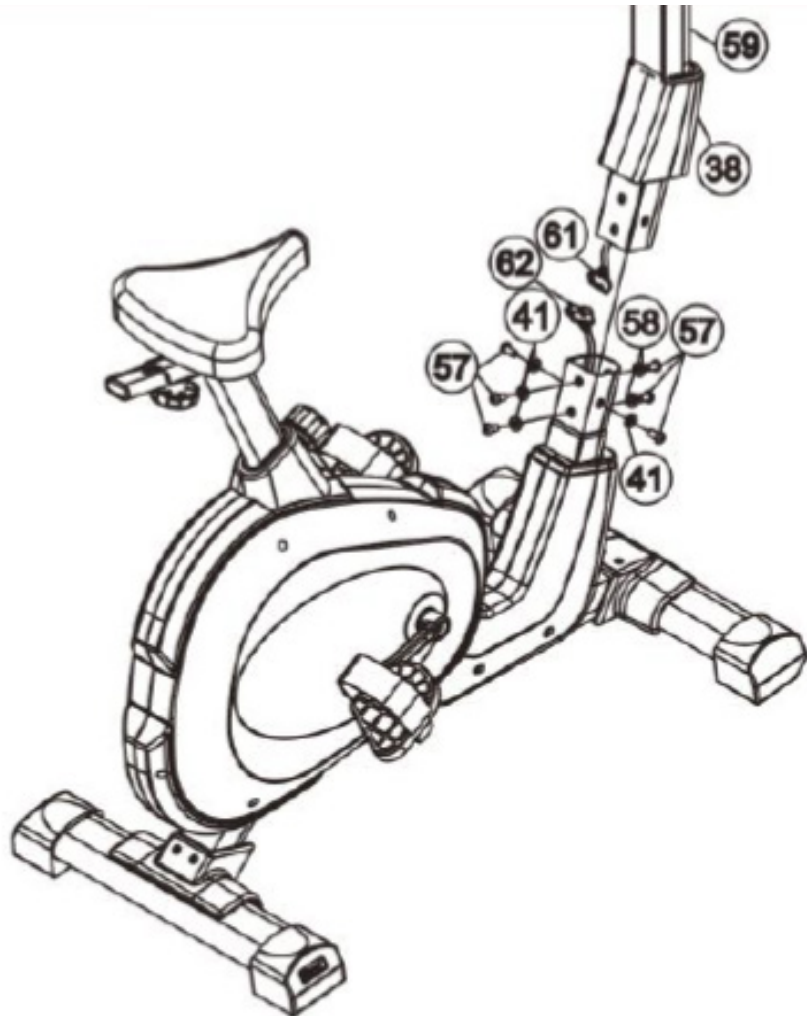

STEP 3: ATTACH THE FRONT POST

- Remove the pre-assembled 6 Allen Head Bolts (57) and 2 Curve Washers (58) and 4 Flat Washers (41) from the Main Frame (1).
- Connect the middle section Sensor Wire (61) of the Front Post (59) and Front Cover (38) with the lower section Sensor Wire (62) securely. Put the Front Post (59) and Front Cover (38) into the bottom post of Main Frame (1) and fasten with 6 Allen Head Bolts (57), 2 Curved Washers (58) and Flat Washer (41).

NOTE: Do not tighten all Head Bolts (57) too much at the beginning. When all parts are fixed, fasten each bolt tightly.

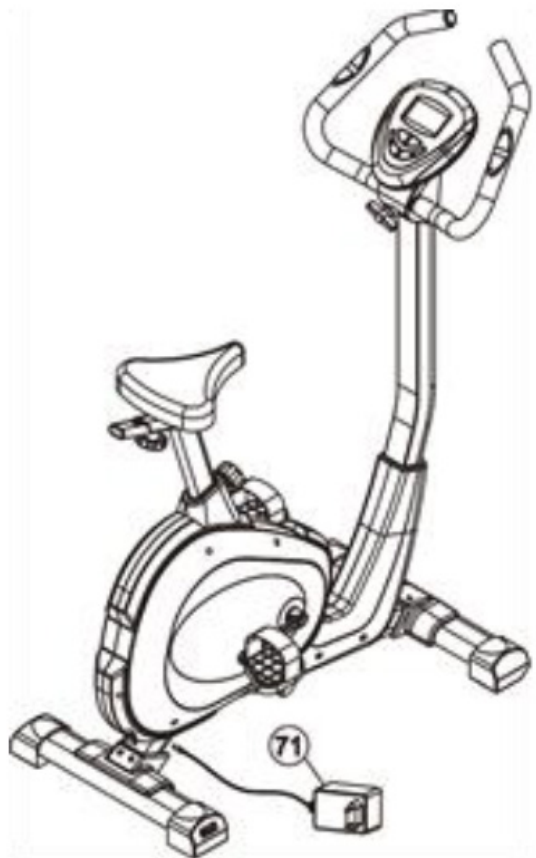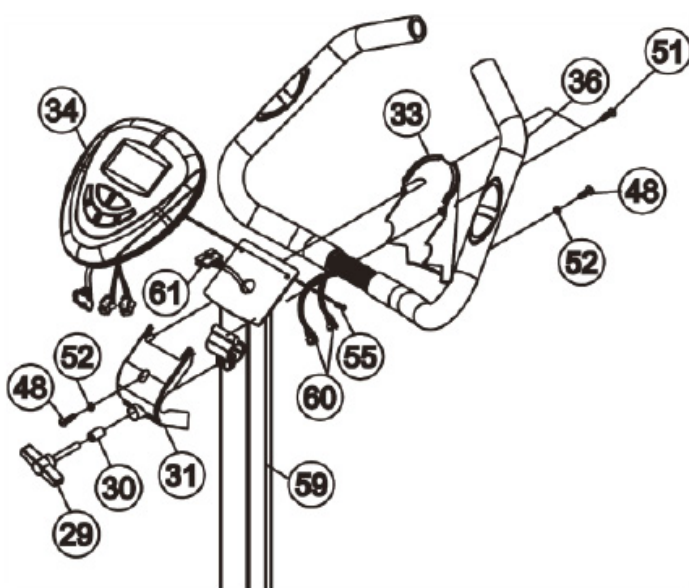

STEP 4: ATTACH HANDLEBAR & METER

- Attach Handlebar (36) with 2 Hand Pulse points (35) and Foam Grip (75) to the top welded handlebar bracket on the Front Post (59). Fasten Rear Clamp Cover (31) with Bushing (30) and T-knob (29).
- Attach Rear Clamp Cover (31) to the Front Post (59) and fasten Front Clamp Cover (33) with 2 Screws (50), Screw (48) and Flat Washer (52).
- Remove the pre-assembled Screw (55) from the Meter (34). Connect the plug for middle section Sensor Wire (61) to the sensor socket of Meter (34). Insert the Meter (34) into Front Post (59) and fasten with 2 Screws (55). Insert the plug for Hand Pulse wire to the back of meter (34).
- Plug the AC Adaptor lead (74) into the socket at the rear end of the bike as shown.

CONGRATULATIONS

Assembly of your **Elite Ultra SLP Exercycle** is now complete! Be sure to fully inspect your machine before using it for the first time.


WARNING: *Failure to visually check and test the assembly of your exercycle before use can cause damage to the exercycle and injury.*

SEAT ADJUSTMENT

Having your bike seat adjusted to the right height is essential for a comfortable ride, efficient pedalling and avoiding injury. There are 2 adjustments located on the seat post. The first is a vertical height adjustment, the second is for horizontal seat position. Although there are many methods and opinions on the optimal saddle setting, the following is a quick and easy method to get started. Further adjustments can be made afterwards to optimise your position and comfort.

Saddle Height Adjustment

Place your heels on the bike pedals and pedal backward. Your legs should be fully extended with your knees straight. If your hips rock from side to side while pedalling backward, the seat is too high. Place the ball of your foot on the pedal. There should now be a slight bend in your knee when the pedal is at its lowest point. This is a good starting point.

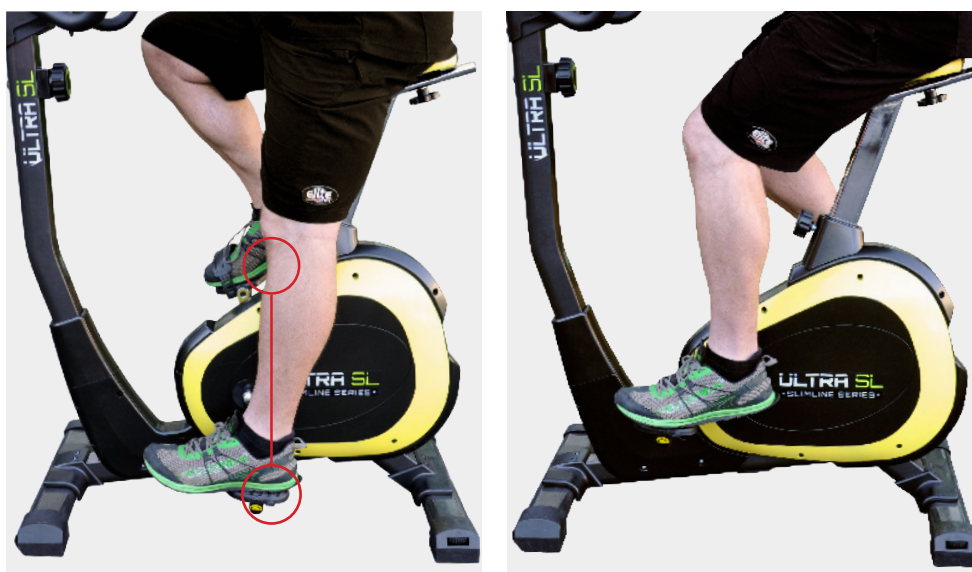

Saddle Height Adjustment

Adjusting Seat Fore and Aft Position

Once you've adjusted the seat height, it's time to find the correct fore-and-aft position of the saddle. This determines where you sit in relationship to the crank set (where the pedals are attached). This will help determine how comfortable and efficient you'll be when riding and minimises stress to the knee by being in a more neutral position. If you want to check the fore-and-aft setting at home, you will need a second person and a plumb line (a length of string with a nut or washer tied on the end will work fine).

- Whilst sitting on the seat, bring your left crank arm around and have your helper stop the crank when the pedal is at three o'clock or parallel with the floor. For this measurement to be accurate, your shoes must be correctly positioned on the pedals (the balls of your feet should be over the pedal axles).
- Holding this position, have your helper place the end of the plumb line on the front of your leg, at a point just below the bony protrusion beneath the kneecap.
- The plumb line's weight should hang over your shoe. Check again to ensure that the crank-arm and pedal are level. By looking at the plumb line the knee should be in alignment with the centre spindle or axle of the pedal.
- Adjust the saddle to the correct position then tighten the locking pin.

CARE AND MAINTENANCE

WARNING

Before cleaning or carrying out any maintenance on your exercycle, ensure the power is turned off and the power cord removed from the plug socket.

Prolong the life of your exercycle by performing periodic maintenance checks. Not only does this ensure your machine is in full working order to ensure they continue to run smoothly and reliably, but it will save you service costs in the long run.

Cleaning

General cleaning of the unit after use will protect the bike's powder-coated framework and prevent unnecessary corrosion stains and damage to the structural components from sweat and perspiration.

Frame and Pedals

Check all nuts and bolts securing the framework, seat and handlebar assemblies are tight.

Ensure the pedals are securely attached to the crank arms. When tightening pay attention to the reverse thread (tightening anti-clockwise) on the left hand pedal assembly, when sitting on the bike. Be careful not to strip or force the pedal thread when tightening.

LIMITED WARRANTY

Warranty Range

Damage in correct maintenance and normal operations (not factitious factors). Warranty card to the original purchaser, shall not be transferred.

Warranty Time

HOME USE ONLY. This bike is not designed for commerical use.

- 10 Year Frame
- 1 Year Parts and Labour

The following conditions are not under warranty range:

- A) As a result of abuse, neglect, accident, or unauthorized modification;
- B) The damage due to incorrect adjustment of the machine;

The Exercycle should not be:

- A) Plugged into a multi-board plug device. The exercycle requires a dedicated power circuit and should be plugged directly into the wall socket.
- B) Used with an extension cord any longer than 1.5m.

Repair and Maintenance Service

Please contact our Elite Fitness Service Department at eliteservice@elitefitness.co.nz or visit www.elitefitness.co.nz for any service related issues or advice on preventative maintenance servicing procedures.

WARM-UP EXERCISE

Warm up exercise is important in preparing the muscles for activity whilst minimising the risk of injury. You may choose to warm up with a light/brisk walking pace for 5-10 minutes before stopping and performing some simple stretches. (As shown in the pictures below)

— Hamstring Stretch (Standing)

Keep your knees slightly bent and slowly lean forward, back and shoulders relaxed, reaching towards your toes. You should feel the tension and slight discomfort in your hamstring muscles. Hold for 15-20 seconds. Repeat 2-3 times.

— Hamstrings Stretches (Seated)

Sitting on the floor preferably on a mat, put one leg straight, the other inward and close to the inside of the straight leg. Lean forward from the hips, reaching towards your toes. Hold for 10-15 seconds, and relax. Repeat 3 times for each leg (See picture 2).

— Crus and Feet Tendon Stretches


Standing with two hands on the wall or tree, one leg behind. Keeping your legs straight and the heel on the ground, lean forward towards the wall or tree. Hold for 10-15 seconds, and relax. Repeat 3 times for each leg (See picture 3).

— Quadriceps Stretches

Keeping your balance with your left hand holding onto a wall or stationery fixture, grasp your right foot with your right hand and stretch your right heel toward your buttocks slowly, until you feel the stretch in the front of your thigh. Hold for 10-15 seconds, and relax. Repeat 3 times for each leg (See picture 4).

— Sartorius (Inner Muscles of the Thigh) Muscle Stretches

Sitting down with the soles of your feet or shoes together and your knees positioned outward. Pull your feet towards your groin until you can feel the stretch. Hold for 10-15 seconds, and relax. Repeat 3 times (See picture 5).

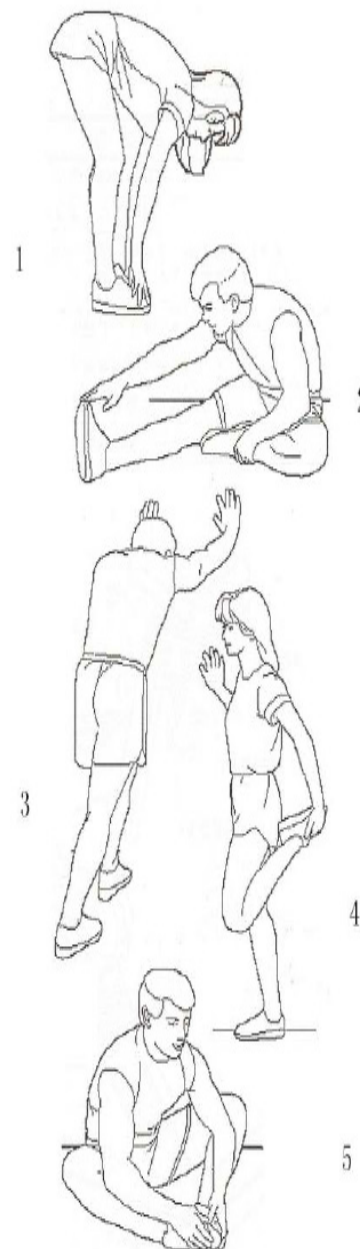

TRAINING STAGES

		Exercise Zone									
		AGE									
Beats Per Minute	100%	200	195	190	185	180	175	170	165	155	150
	VO2 Max (Maximum Effort)										
	90%	180	176	171	167	162	158	153	149	140	135
	Anaerobic (Hardcore Training)										
	80%	160	156	152	148	144	140	136	132	124	120
	Aerobic (Cardio Training/Endurance)										
	70%	140	137	133	130	126	123	119	116	109	105
	Weight Control (Fitness/Fat Burn)										
	60%	120	117	114	111	108	105	102	99	93	90
	Moderate Activity (Maintenance/Warm up)										
50%	100	98	95	93	90	88	85	83	78	75	

Cardiovascular training plays an important part in maintaining a healthy heart and lung function, so it's no surprise we should be paying attention to how quickly our heart beats during exercise. The chart above outlines a range of heart rate training zones determined by the individual's age and workout goals to ensure you train safely and effectively.

Heart Rate can be measured by using the radial (wrist) or carotid (neck) pulse using your index and middle fingers, counting the beats for 10 seconds and multiplying by 6. Alternatively, the use of a Wireless Telemetry Heart Rate strap and watch will give you an accurate Beats Per Minute (BPM) reading.

$220 - \text{AGE} = \text{TMHR}$ (Theoretical Maximum Heart Rate)

$\text{TMHR} \times 85\% =$ (Upper Training Limit) BPM

$\text{TMHR} \times 65\% =$ (Lower Training Limit) BPM

Note: Contact heart rate may provide inaccurate readings and is designed only as a guide










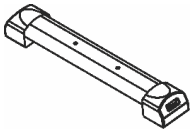
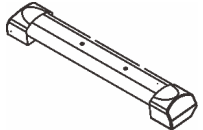




Example: $220 - 39 = 181$ BPM

$181 \times 85\% (0.85) = 154$ BPM (Upper Training Limit)

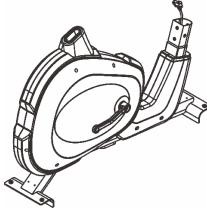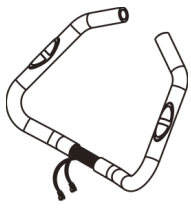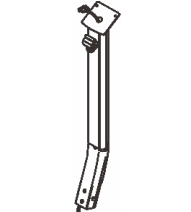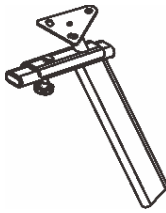
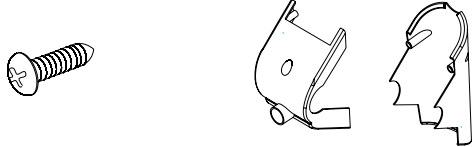


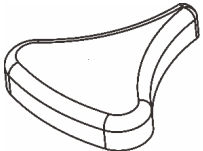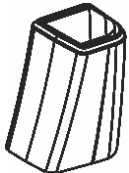
$181 \times 65\% (0.65) = 118$ BPM (Lower Training Limit)

PARTS

We recommend 2 people assist in assembling this unit. Place all parts of the exercycle in a cleared area and remove the packing materials. Do not dispose of the packing materials until assembly is completed. Before you start installation, inspect and prepare all parts and screws featured in this manual. When you open the carton, you will find the following parts:

PART NO.	DESCRIPTION	Q'TY	SKETCH	
1, 15, 17	Main Frame, Chain Cover, Crank	1 Set		
36, 75, 35	Handlebar, Foam Grip, Hand Pulse	1 Set		
23, 27, 24	Seat Tube, Slide Bracket, Knob	1 Set		
59, 61	Front Post, Middle Sensor Wire	1 Set		
34, 55	Meter, Screw	1 Set		
28, 41, 46	Seat, Flat Washer, Nylon Nut	1 Set		
38	Front Cover	1		
3, 6	Rear Stabiliser Cover, Front Stabiliser Cover	1 Set		
2, 4	Rear Stabiliser Tube, Adjustable End Cap	1 Set		
5, 7	Front Stabiliser Tube, Transport Wheels	1 Set		
18	Pedal Set	1 Set		
19	Release Knob	1		
74	Adaptor	1		

PARTS


PART NO.	DESCRIPTION	Q'TY	SKETCH	
1, 5, 17	Carriage Bolt M8x55	1 Set		
36, 75, 35	Flat Washer 18/8.5x1.5	1 Set		
23, 27, 24	Screw M4x15	1 Set		
59, 61	Rear Clamp Cover, Front Clamp Cover	1 Set		
34, 55	T Knob	1		
28, 41, 46	Bushing	1 Set		
38	Screw M4x20	1		
3, 6	Flat Washer 10x5	1 Set		
	Tool 1	1		
	Tool 2	1		

PARTS LIST

PART NO.	DESCRIPTION	Q'TY
1	Main Frame	1
2	Rear Stabiliser Tube	1
3	Rear Stabiliser Cover	1
4	Adjustable End Cap	2
5	Front Stabiliser Tube	1
6	Front Stabiliser Cover	1
7	Transport Wheel End Cap	2
8	Pulley	1
9	Axle	1
10	Bearing	2
11	Belt	1
12	Idle Wheel Bracket	1
13	Idle Wheel	1
14	Flywheel	1
15	Chain Cover (R) & (L)	1 Set
16	Crank Cover	1
17	Crank (R) & (L)	1 Set
18	Pedal (R) & (L)	1 Set
19	Release Knob	1
20	Middle Cup	1
21	Rear Cover	1
22	Front Chain Cover (R) & (L)	1 Set
23	Set Tube	1
24	Knob	1
25	End Cap	2
26	Bolt M8x55	1
27	Slide Braket	1
28	Seat	1
29	T Knob	1
30	Bushing	1
31	Rear Clamp Cover	1
32	Motor	1
33	Front Clamp Cover	1
34	Meter	1
35	Hand Pulse	1 Set
36	Handlebar	1
37	Round End Cap	2

PART NO.	DESCRIPTION	Q'TY
38	Front Cover	1
39	Screw for Hand Pulse	2
40	Carriage Bolt M8x55	4
41	Flat Washer 18/8.5x1.5	10
42	Stop Nut	2
43	Flat Washer 20/10x2.0	2
44	Adjustable Bolt M6x36	2
45	Special Bolt	1
46	Nylon Nut	2
47	'C' Ring	2
48	Screw M4x20	14
49	Screw M4x15	4
50	Screw M4x15	8
51	Screw M4x15	2
52	Flat Washer 10/5	2
53	Bolt	4
54	Lower Power Wire	1
55	Screw	2
56	Stop Nut	2
57	Bolt M8x15	6
58	Curved Washer 20/8.5x1.5	2
59	Front Post	1
60	Hand Pulse Wire	2
61	Middle Sensor Wire	1
62	Lower Sensor Wire	1
63	Curved Washer	1
64	Flat Washer 22/8.5x1.5	1
65	Crank Cap	2
66	Spring	1
67	Sensor	1
68	Sensor Bracket	1
69	Screw	1
70	Foam Grip	2
71	Adaptor	1
72	Cable Wire	1
73	Fix Nut	1

EXPLODED DRAWING

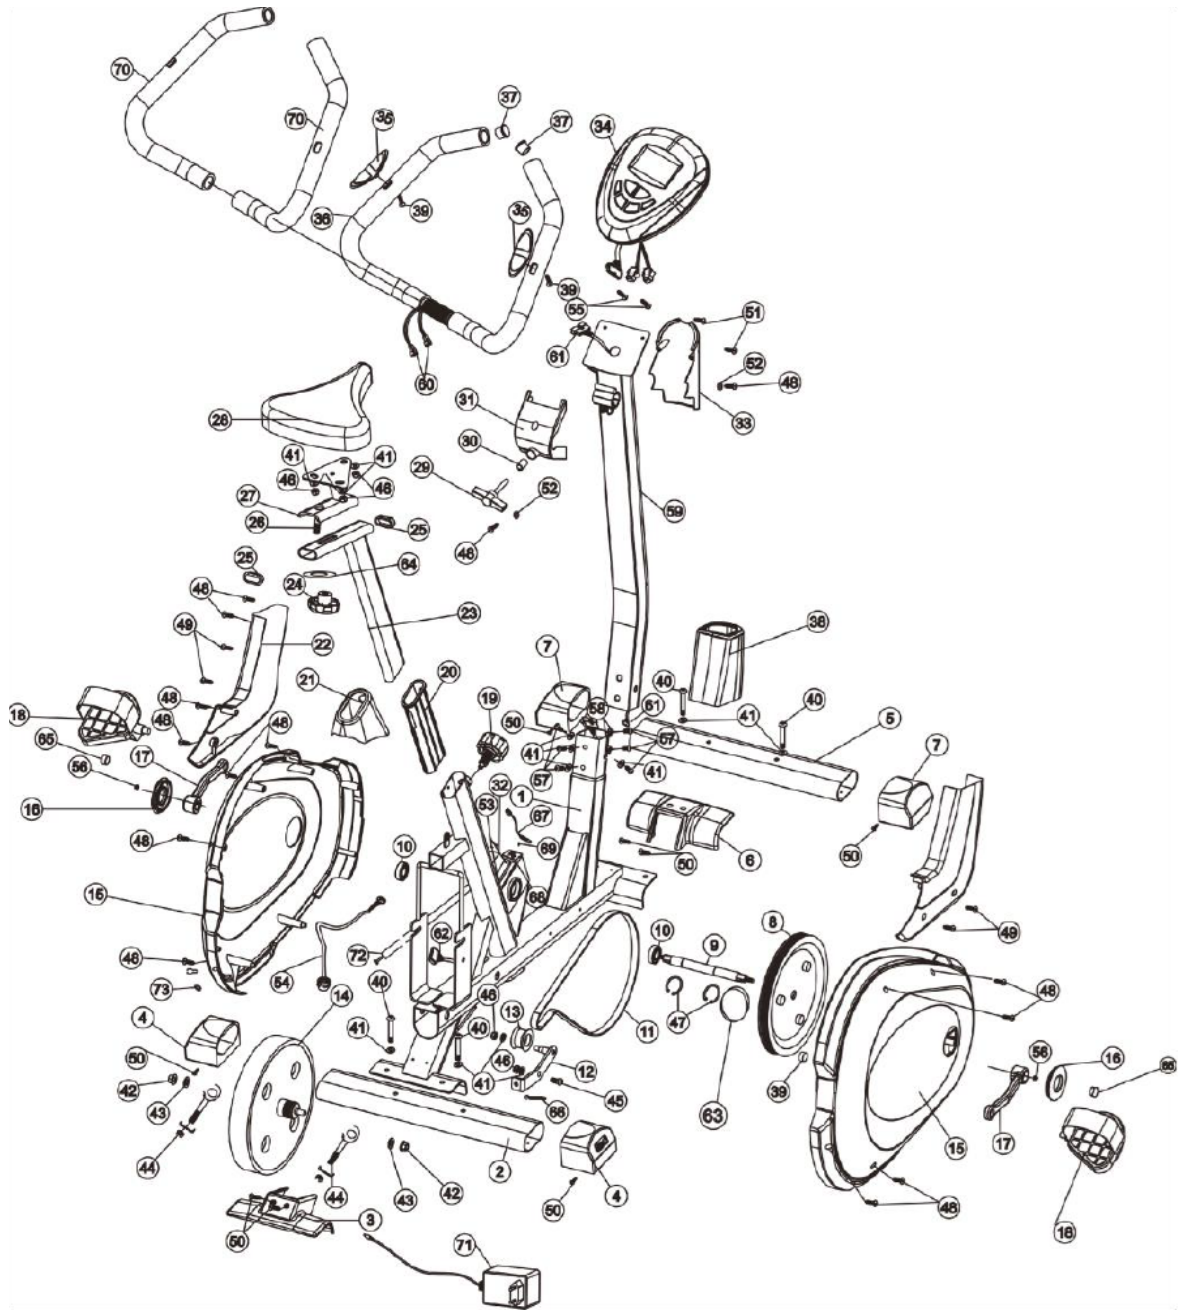



For more information about our Elite exercise equipment or other brands that we stock for your home, visit www.elitefitness.co.nz

Copyright © 2015 Elite Fitness

Elite Fitness, 11 George Bourke Drive, Mt Wellington, Auckland, New Zealand,
0800 243 834, www.elitefitness.co.nz

Keep up to date with the latest products, competitions and equipment, follow us on our social media sites.

